






Concealed cistern installation manual

Gömme rezervuar montaj broşürü / Montageanleitung Unterputzspülkästen /
Manuel d'installation bâtis support / Manuale installazione cassetta da incasso /
Инструкция по установке Инсталляций

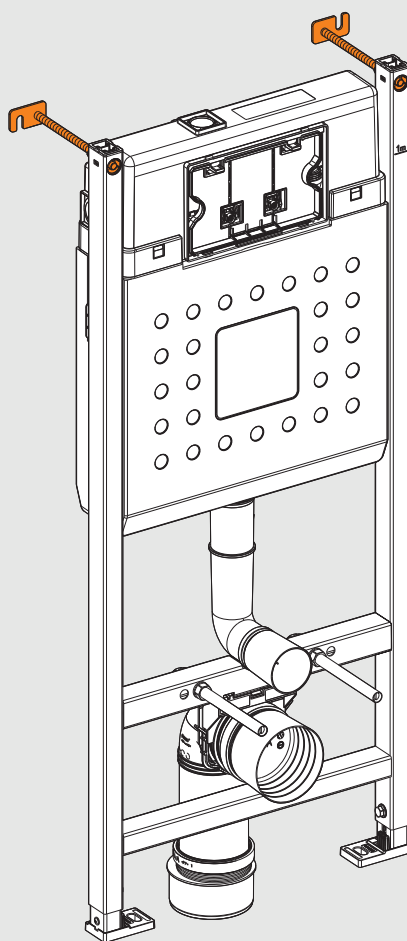



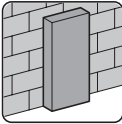


A


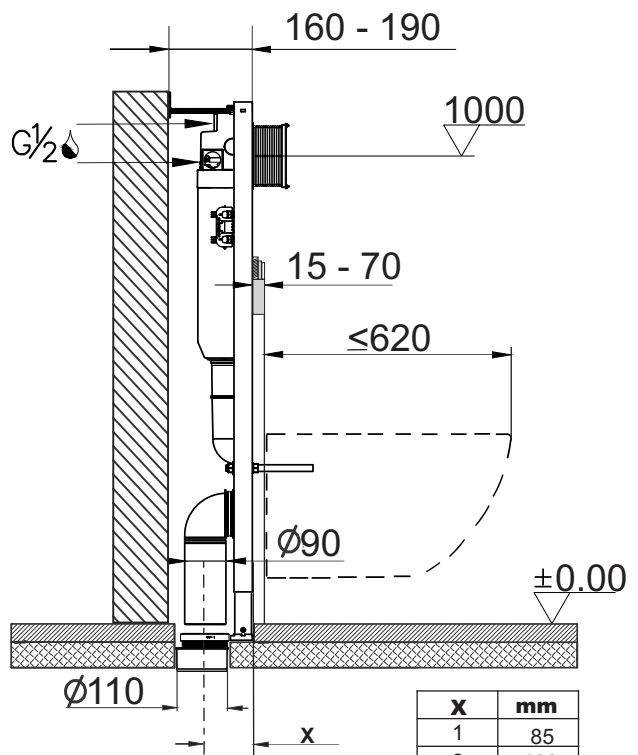
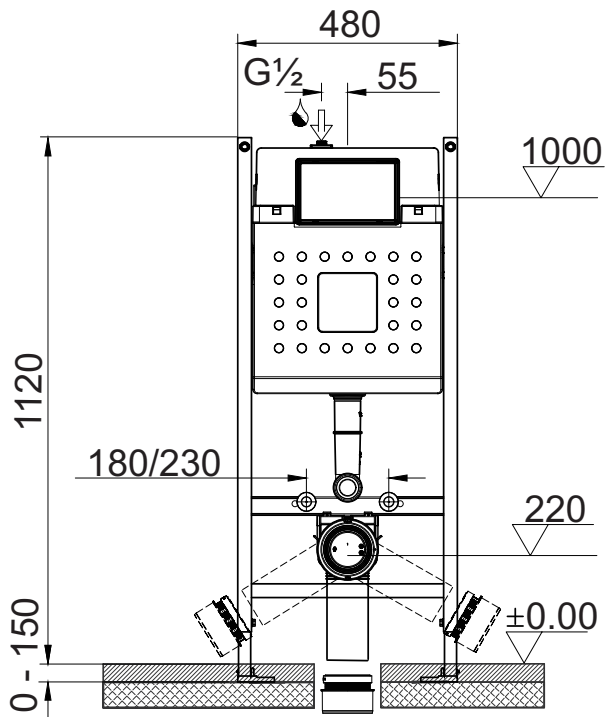
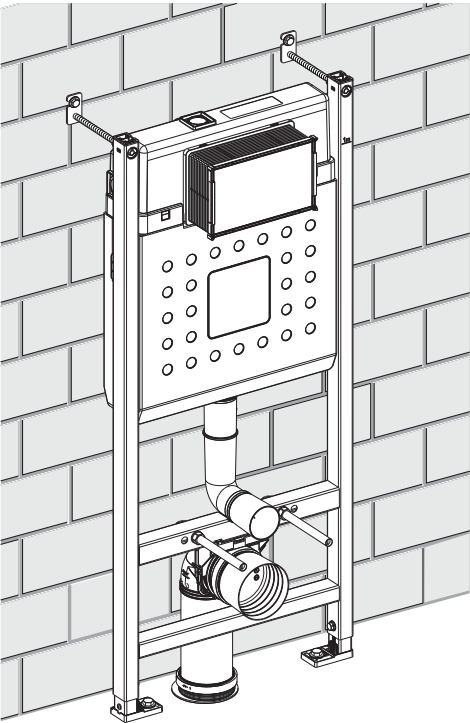



X	mm
1	85
2	102
3	119

B

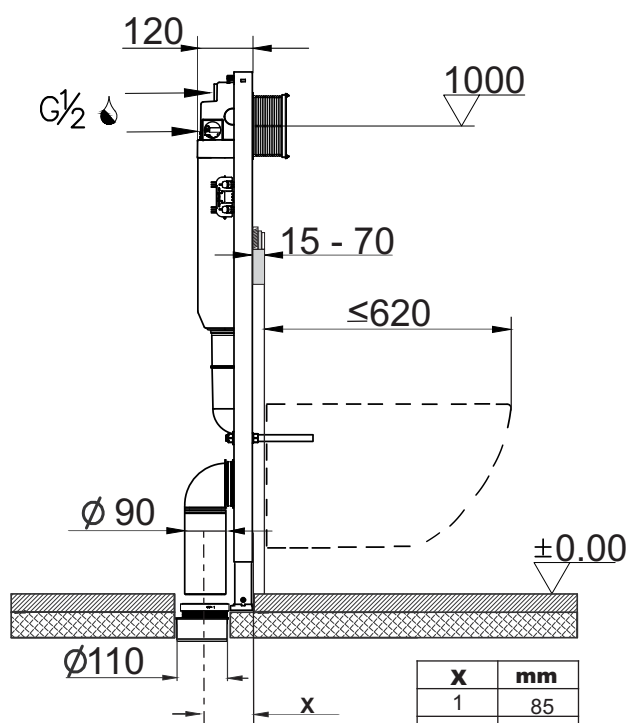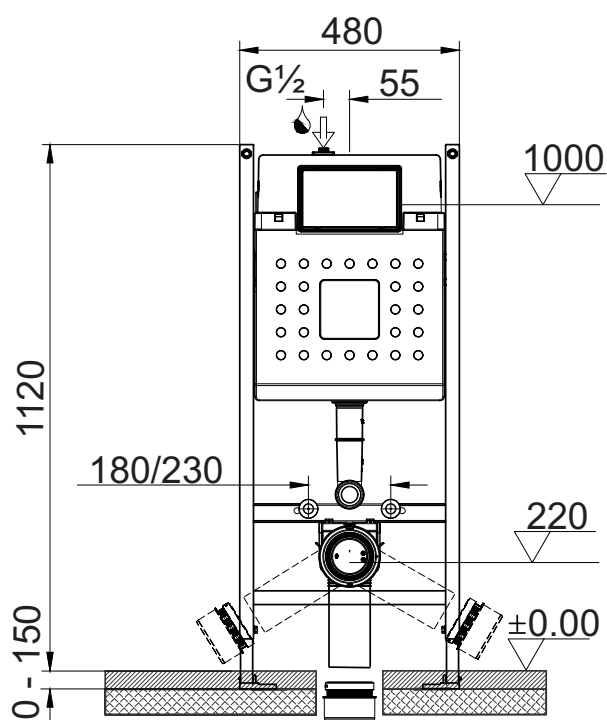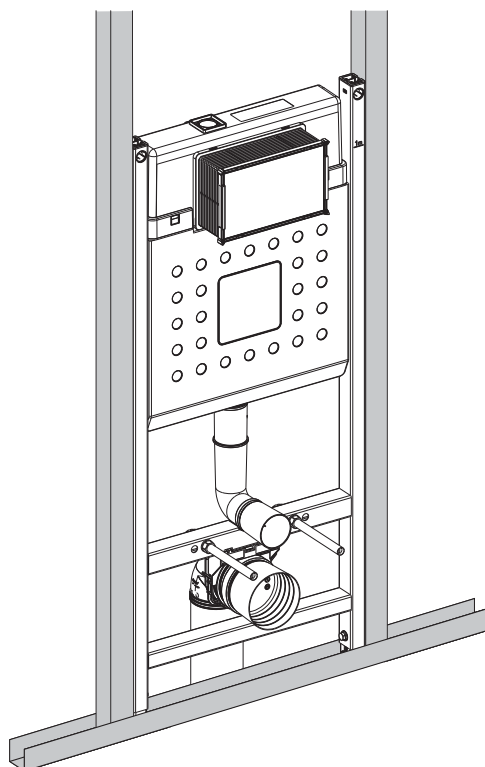


X	mm
1	85
2	102
3	119

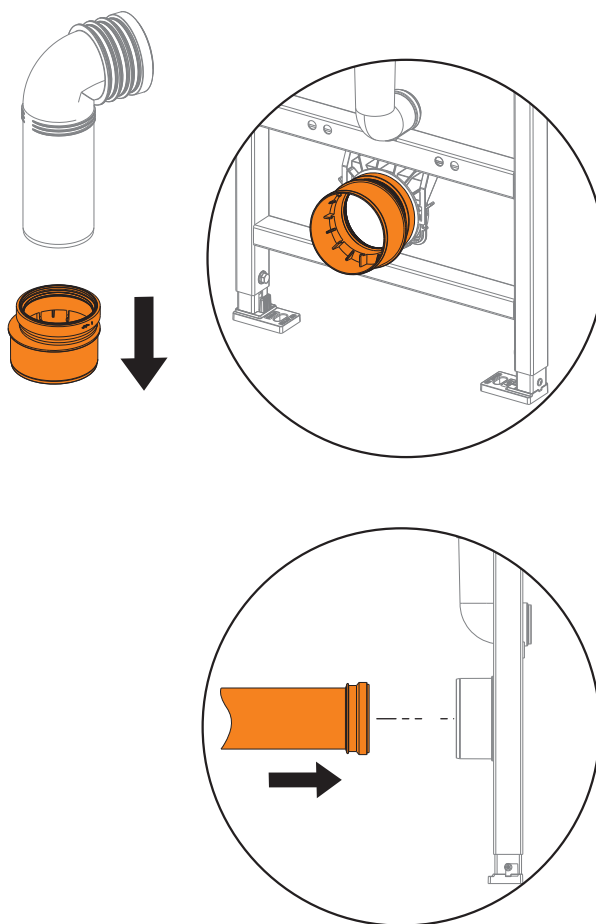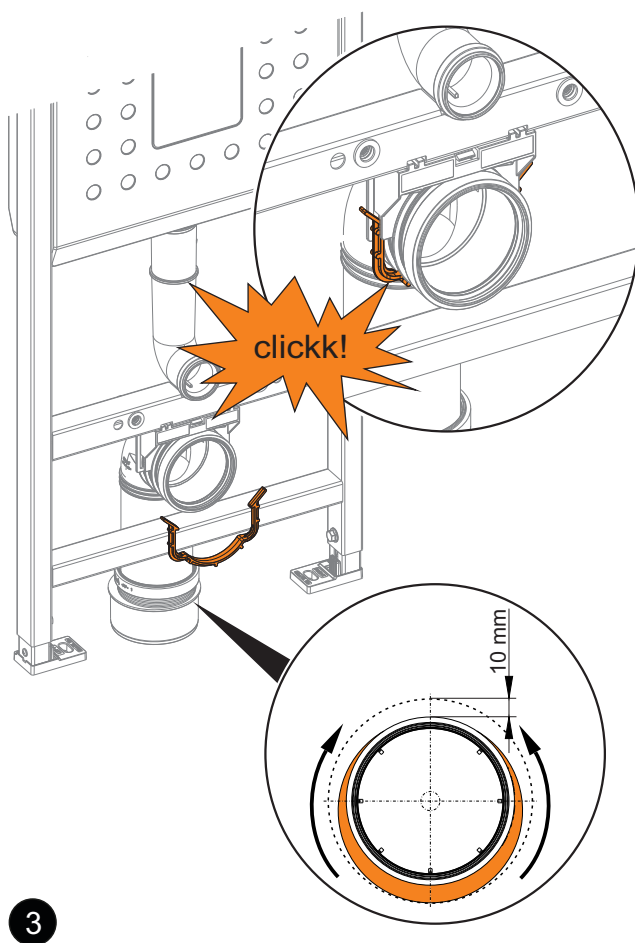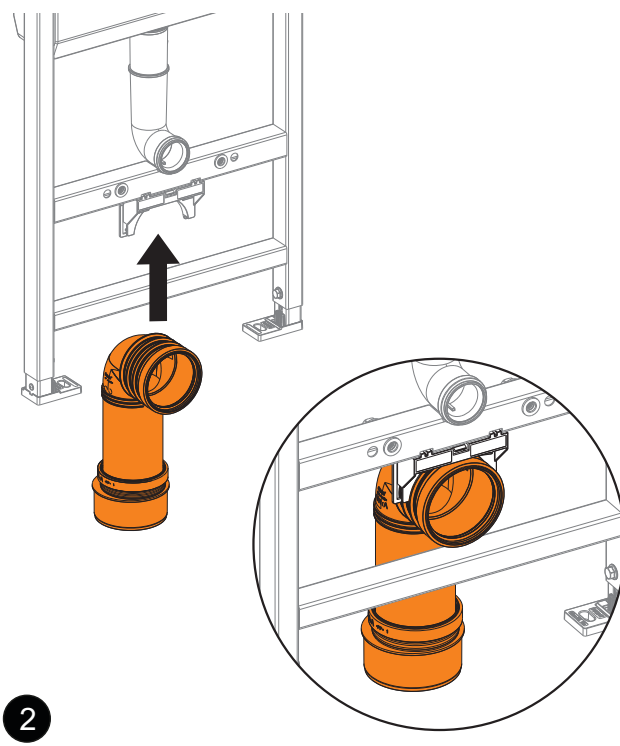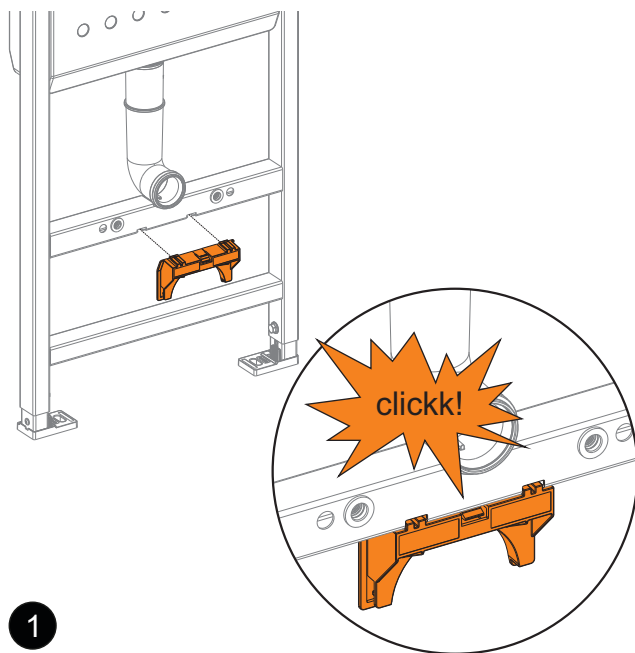


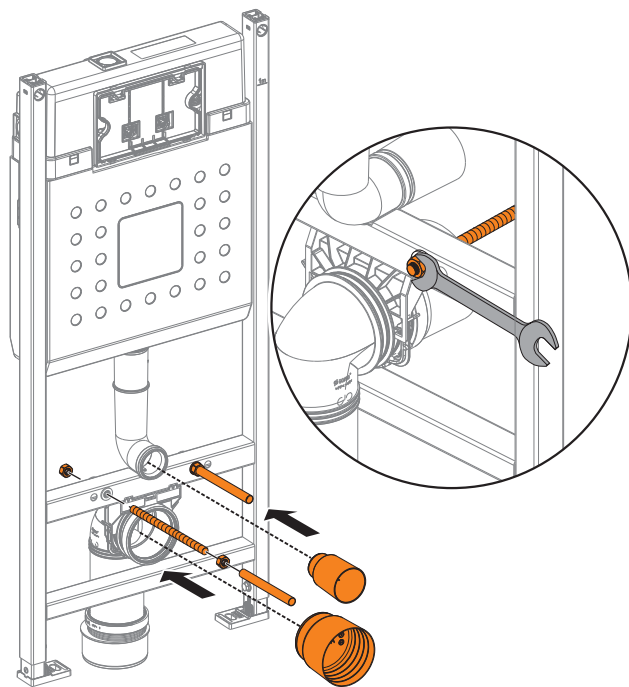



4

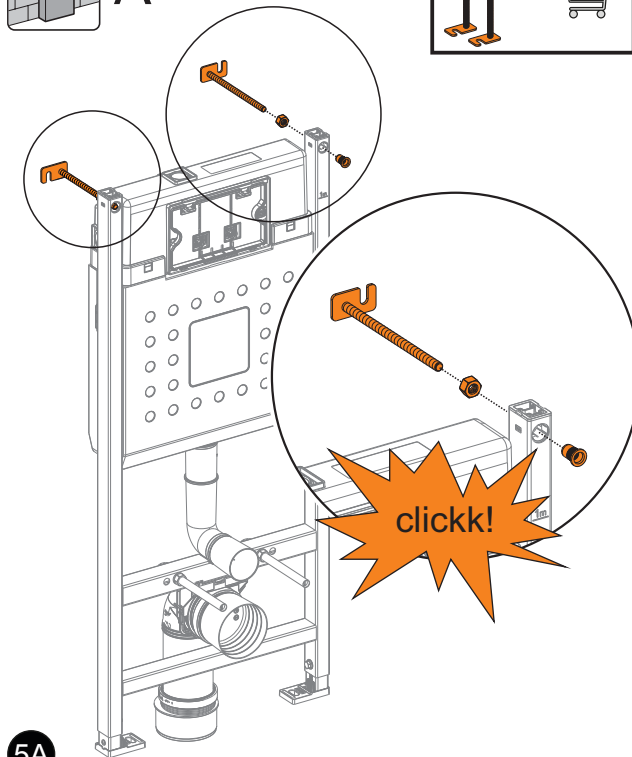


5A


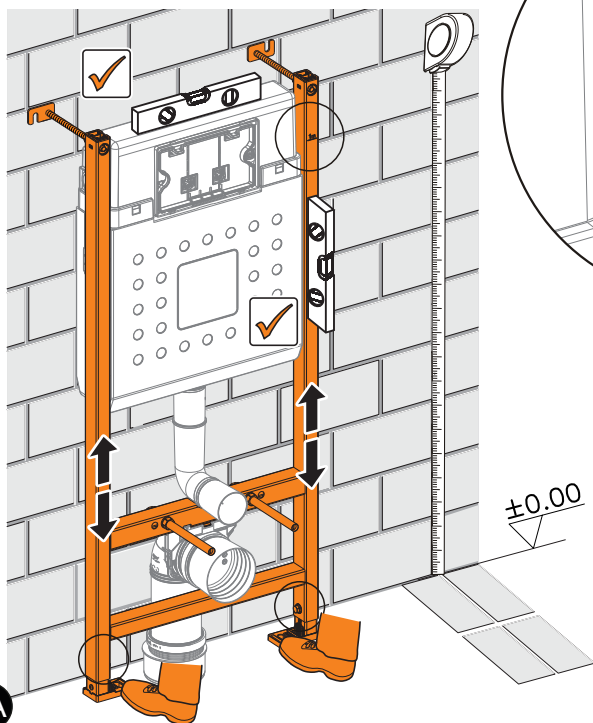


6A

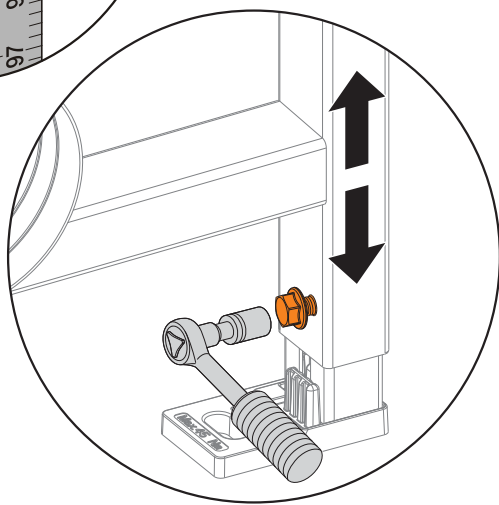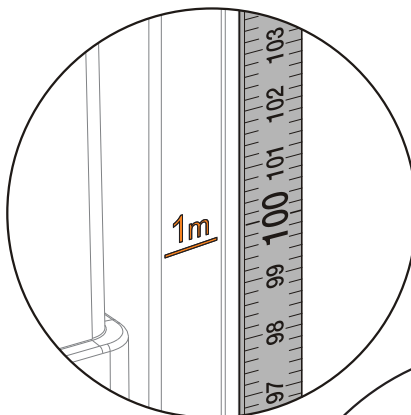







A

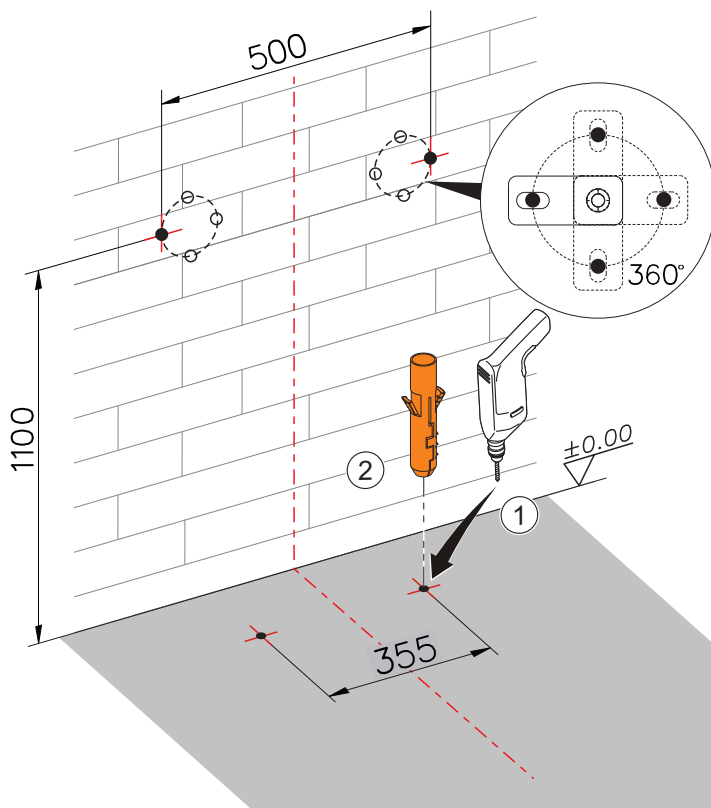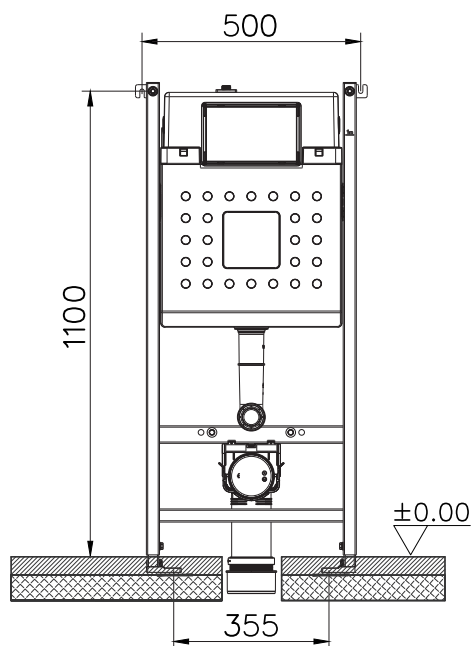

7A




A

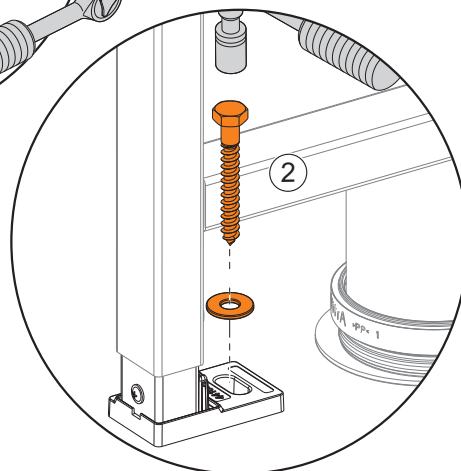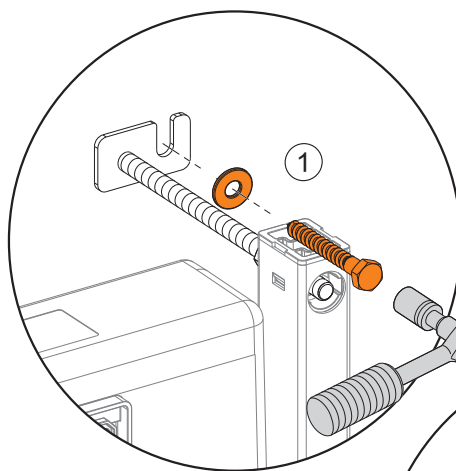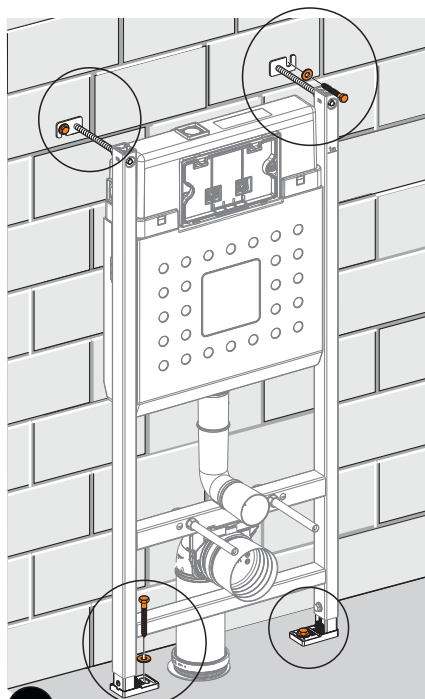

8A




B

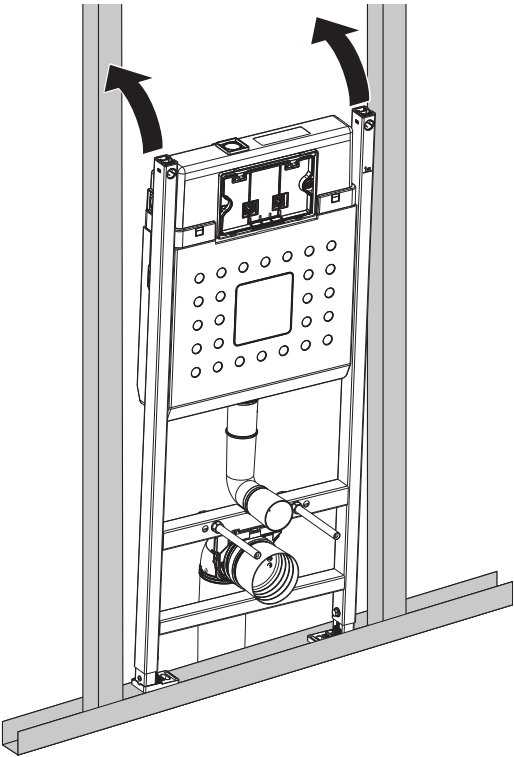




5B



B

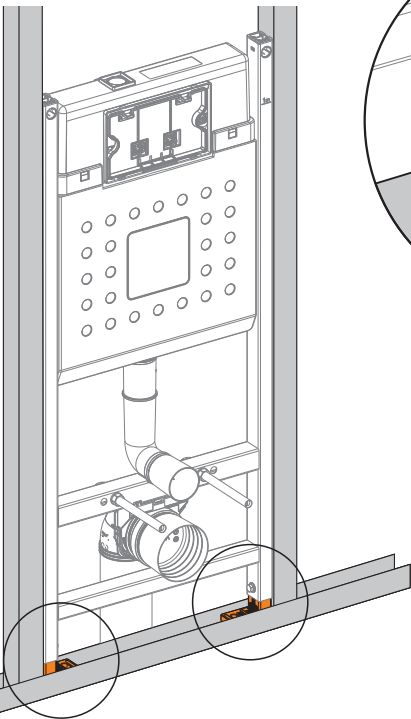


6B

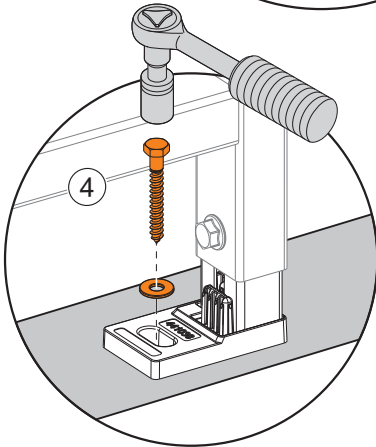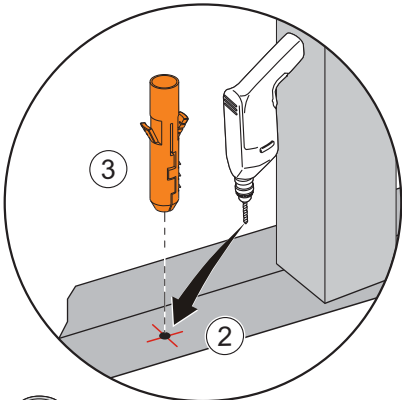
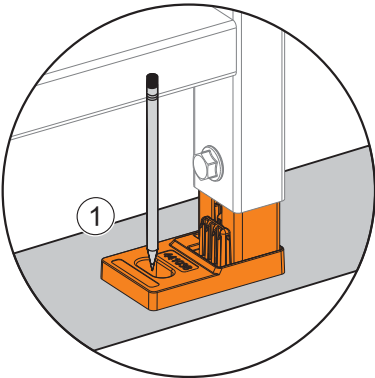





B

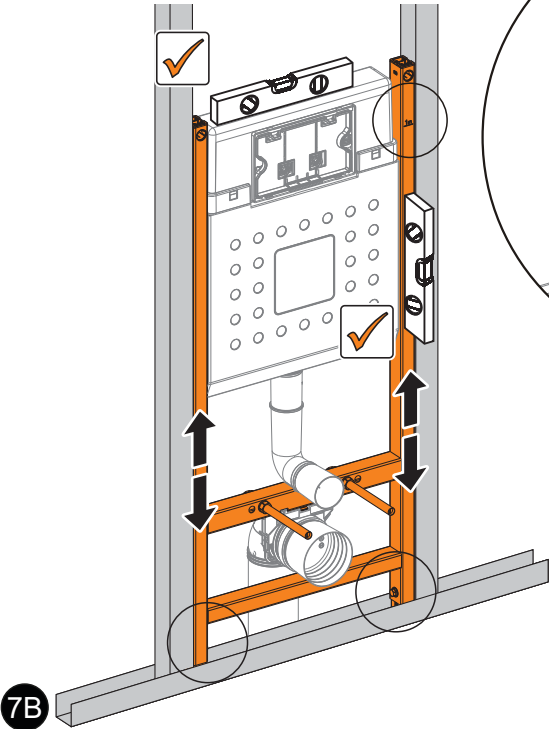


7B

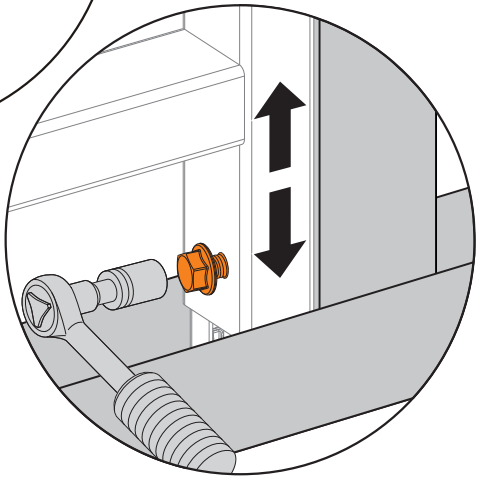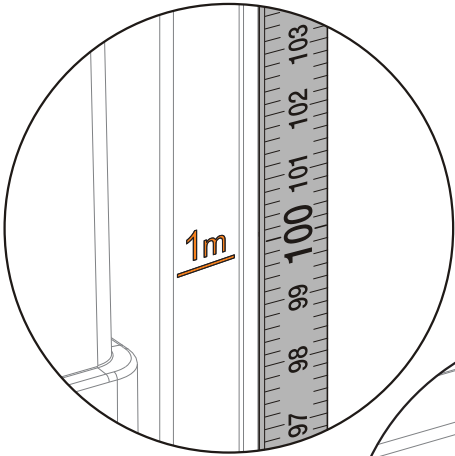


B




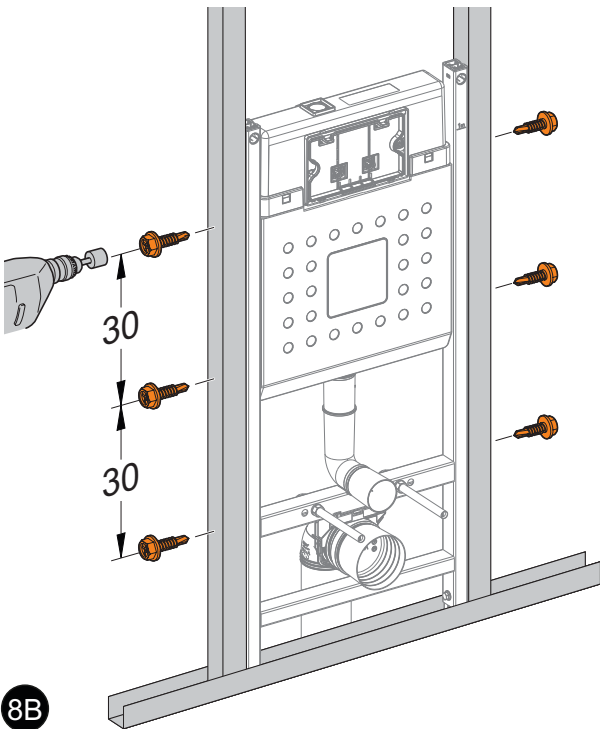


8B



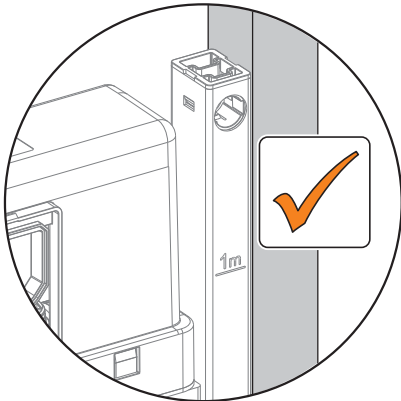


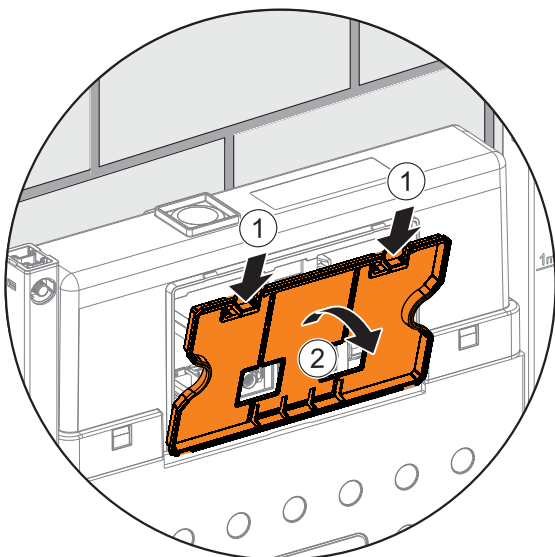


9

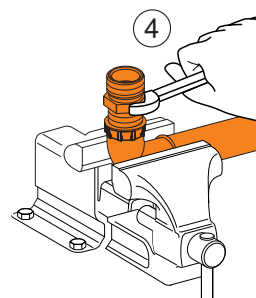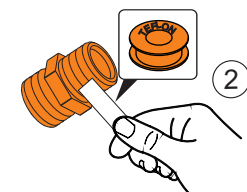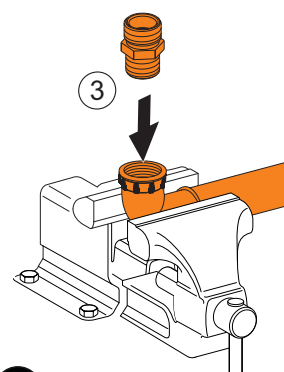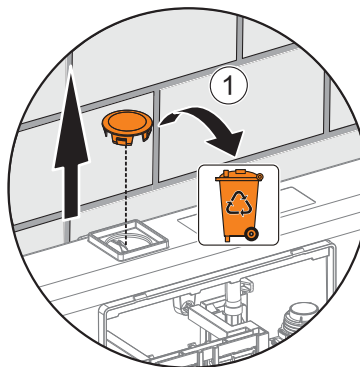


10

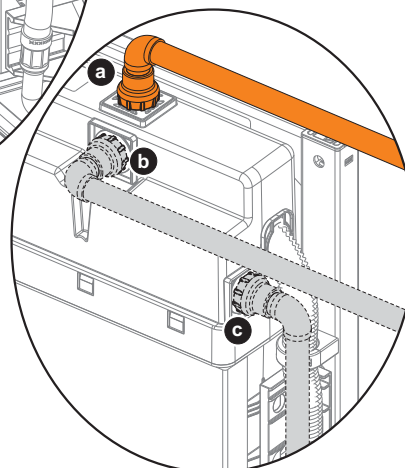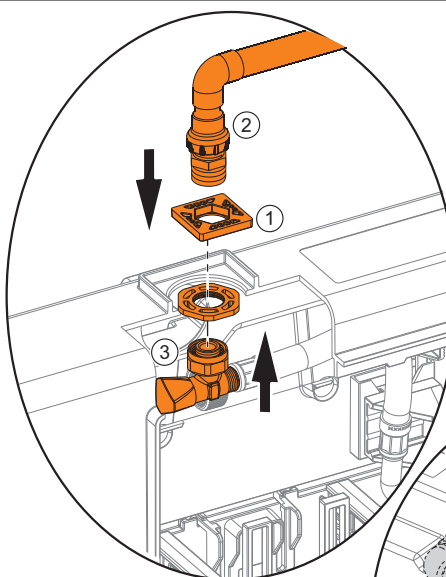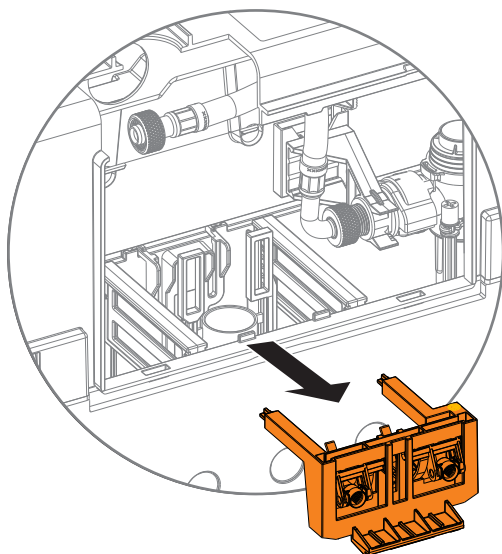



11

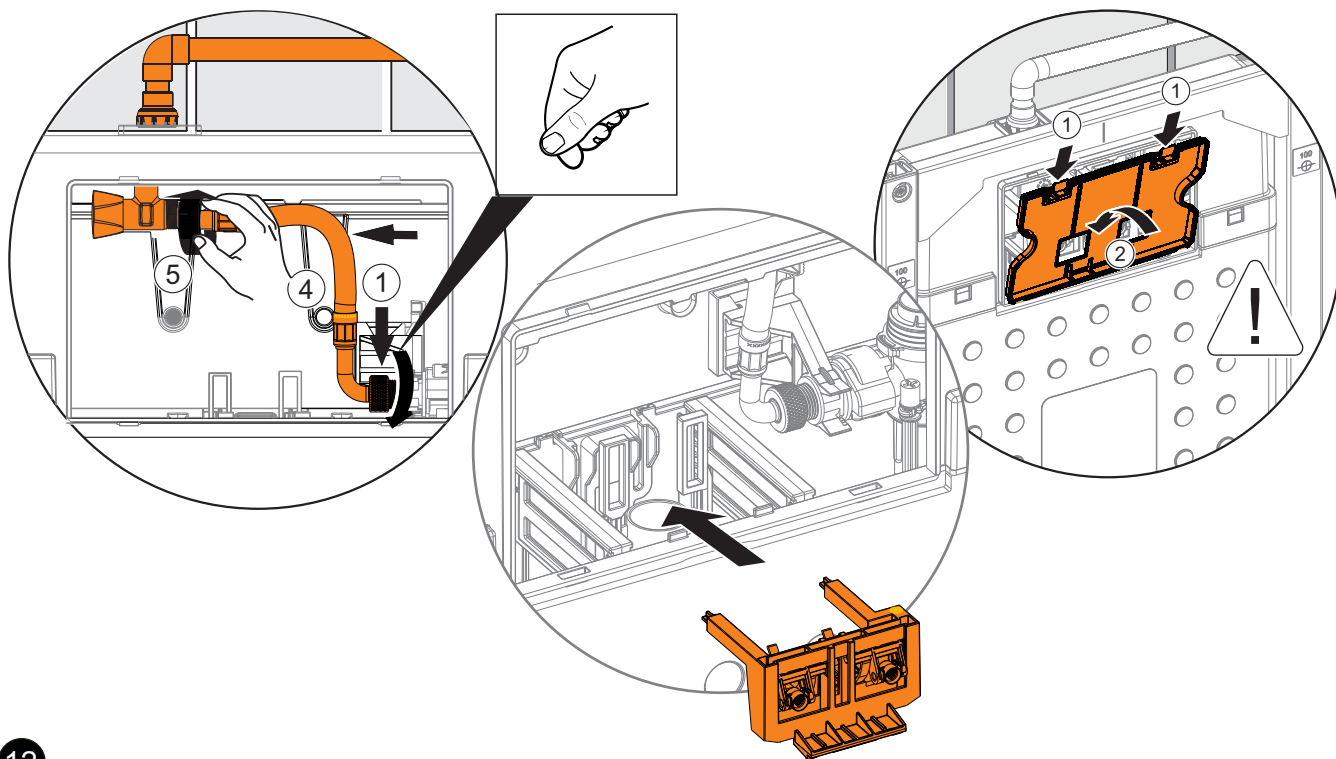




12

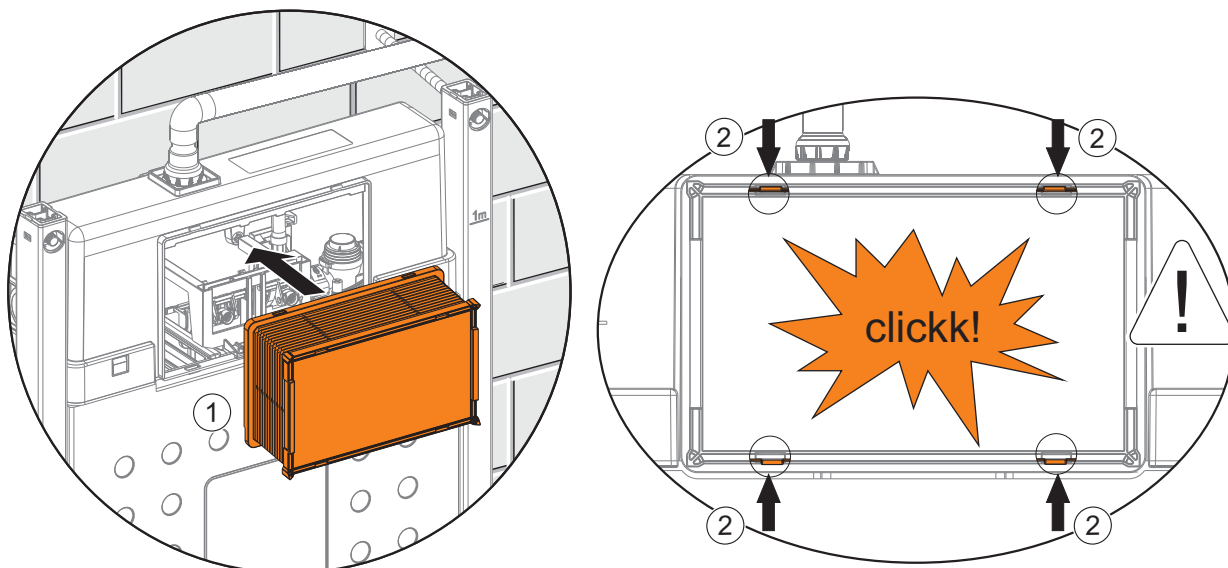

13

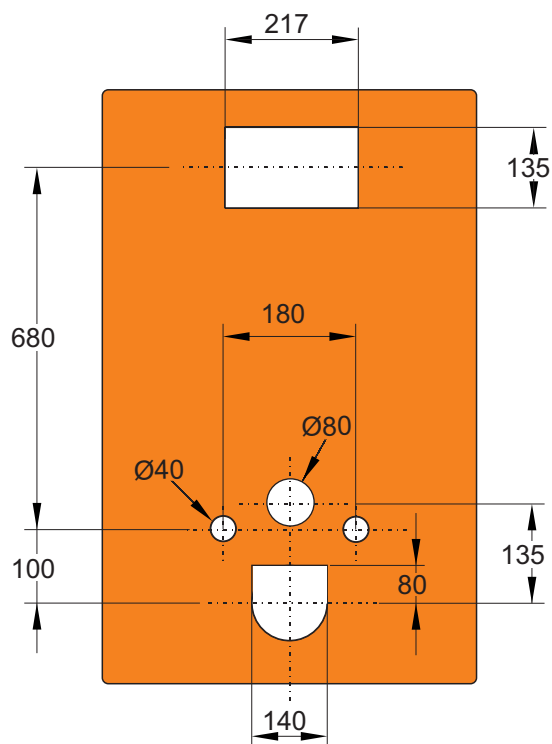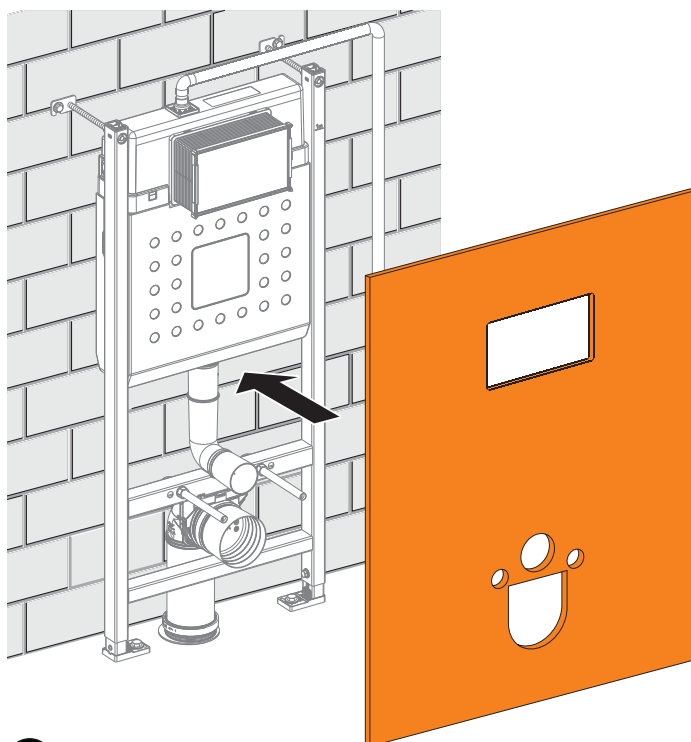

14

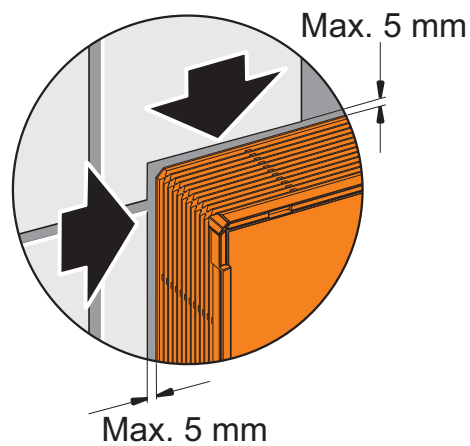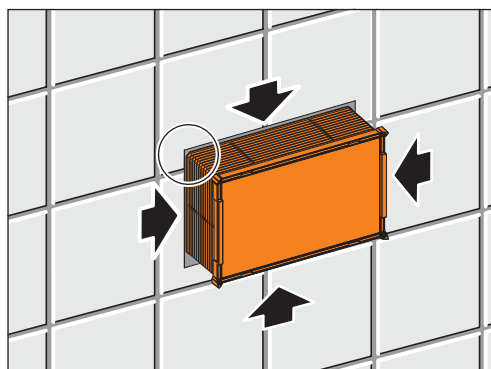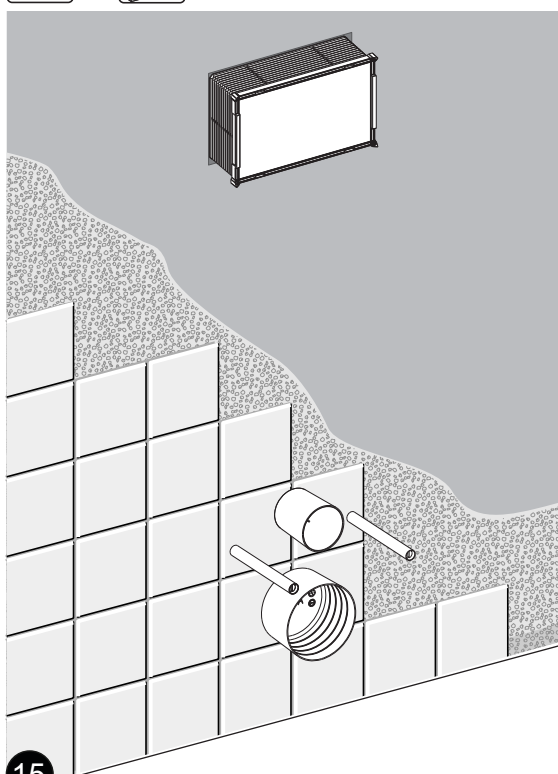

15