


KRONENBACH

Plantec 3.0


KB100605NU

Montageanleitung
Assembly instructions
Instructions de montage
Instrucciones de montaje
Instrukcja montażu





[mm]

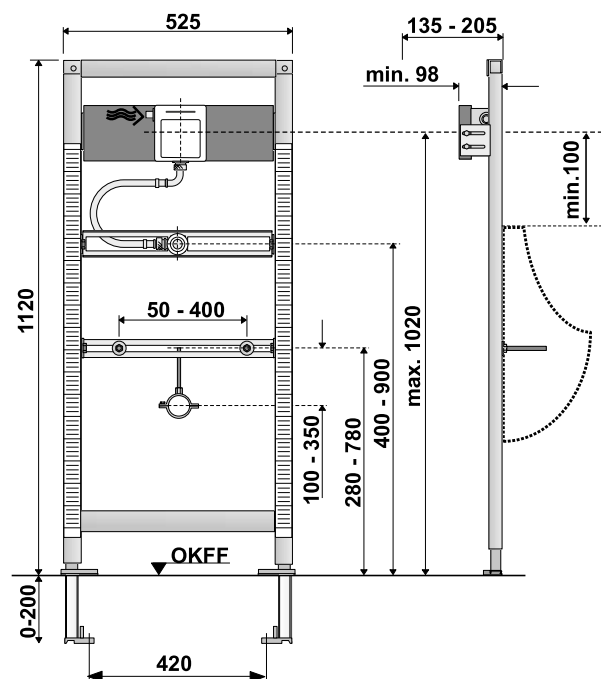







KB100613NU*






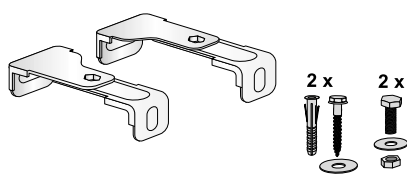


Trockenbausystem 996 / Drywall system 996 /
Système de cloisons sèches 996 /
Sistema de construcción en seco 996 /
System suchej zabudowy 996

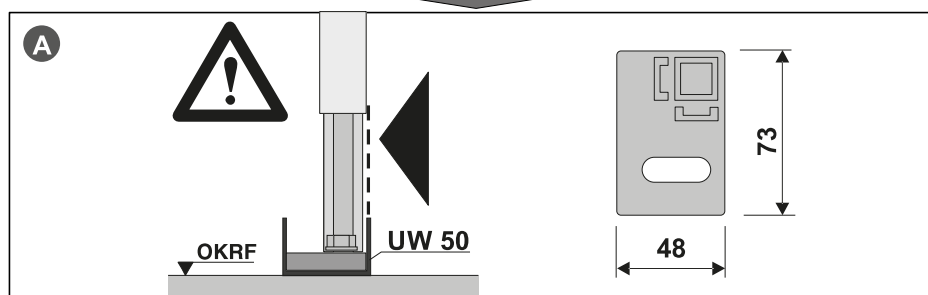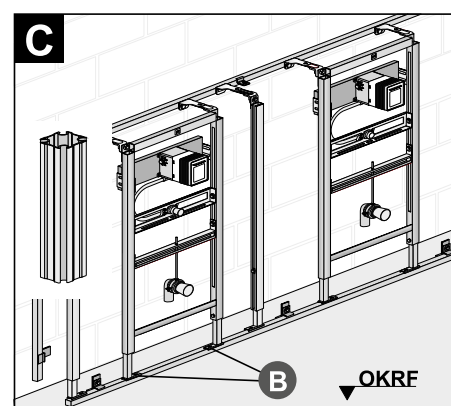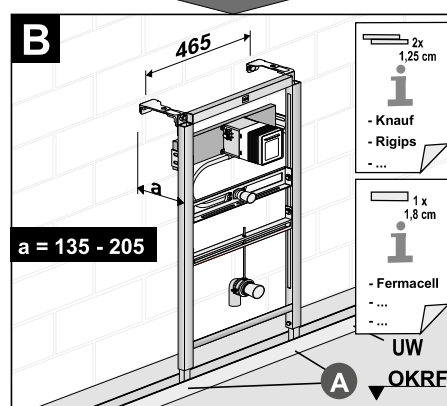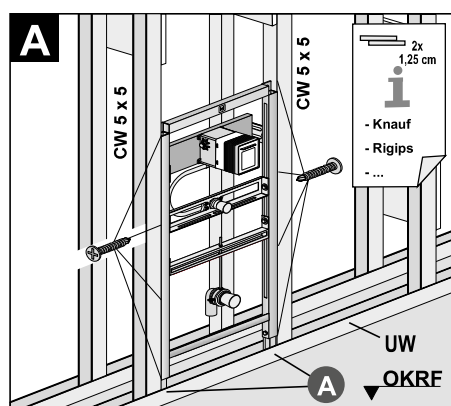

*Separat bestellen / Order separately / Commander séparément / Pedir por separado / Zamów osobno

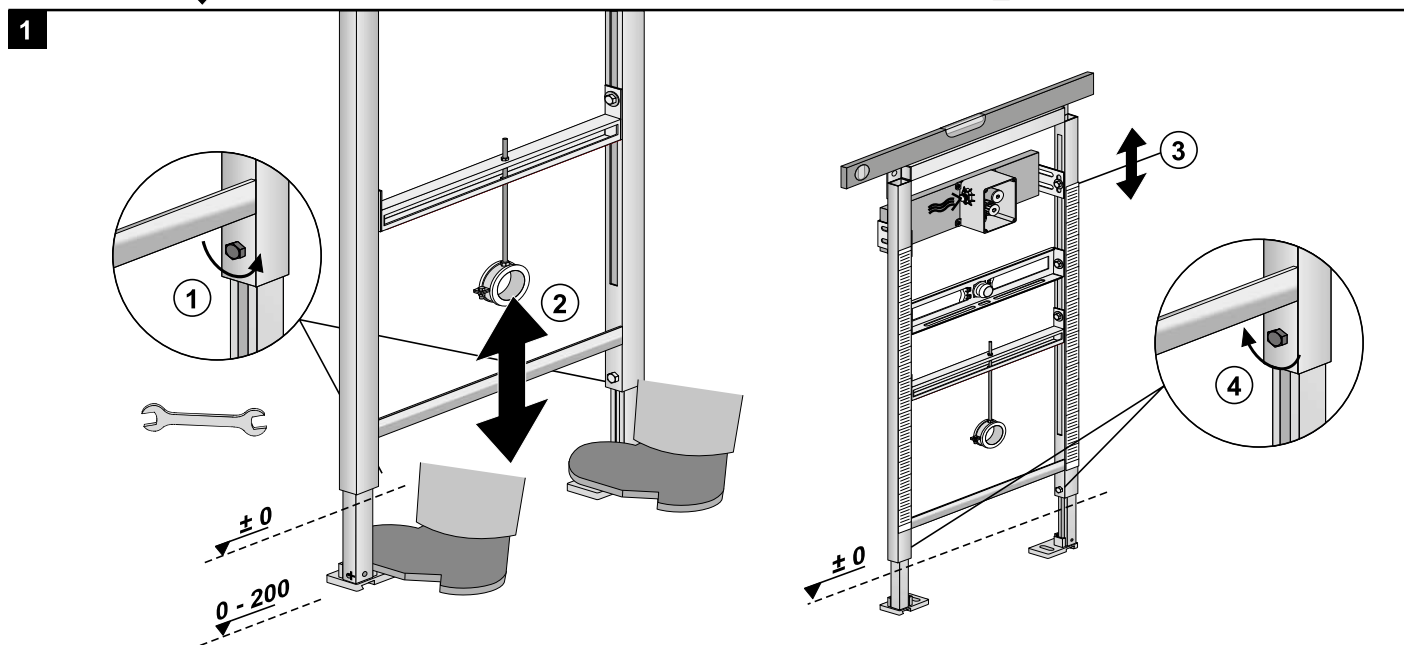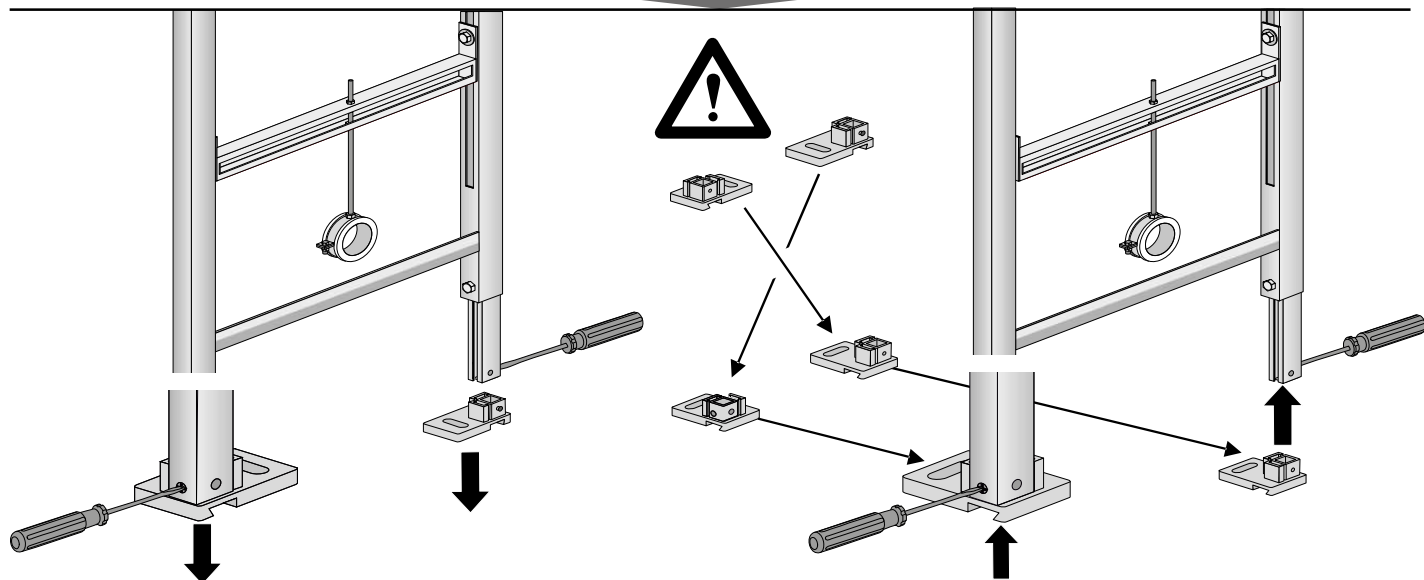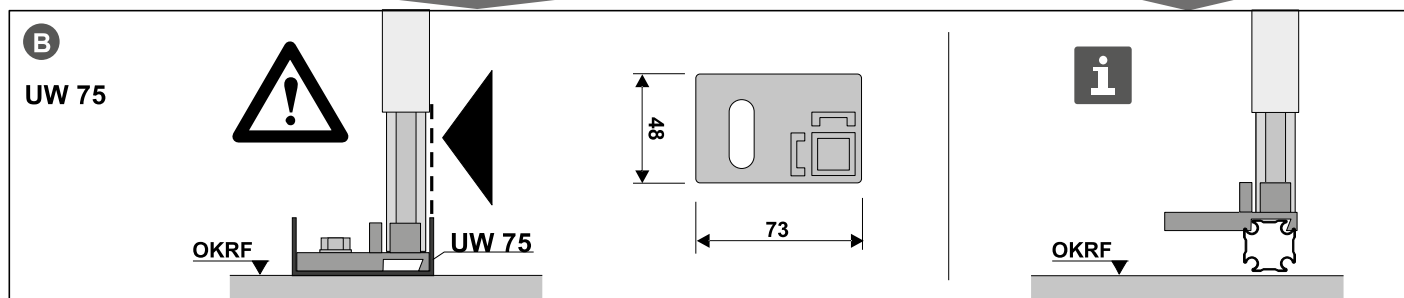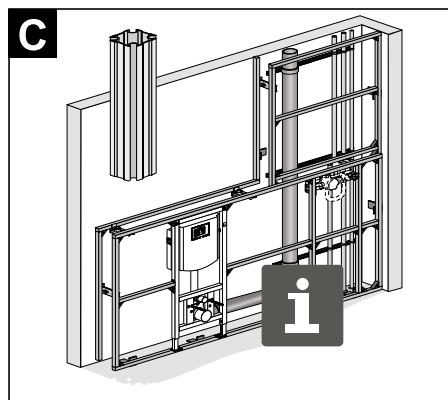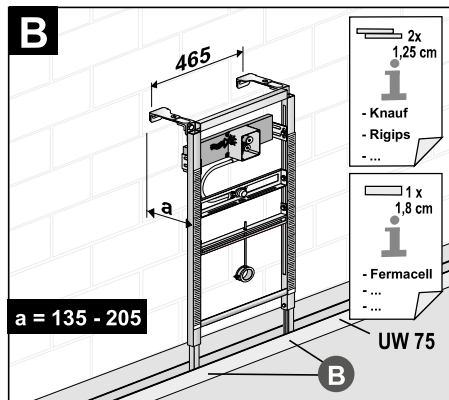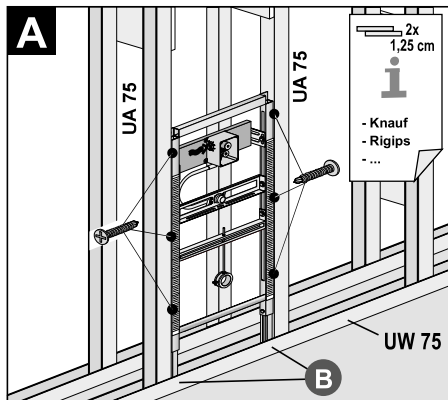

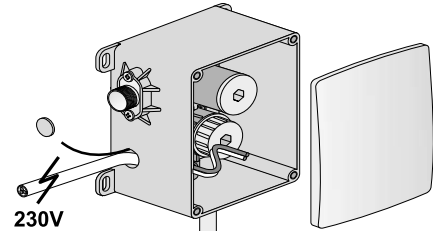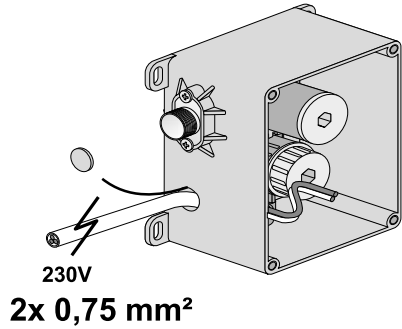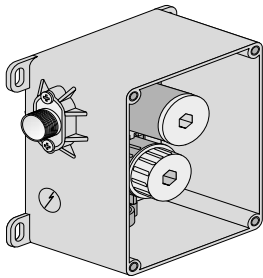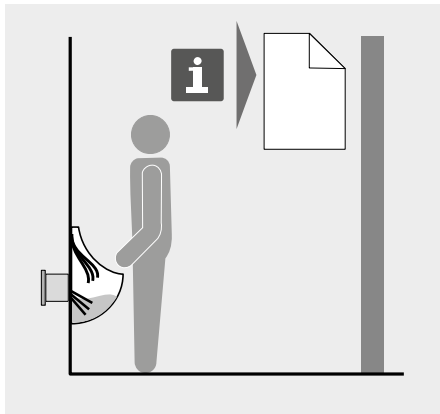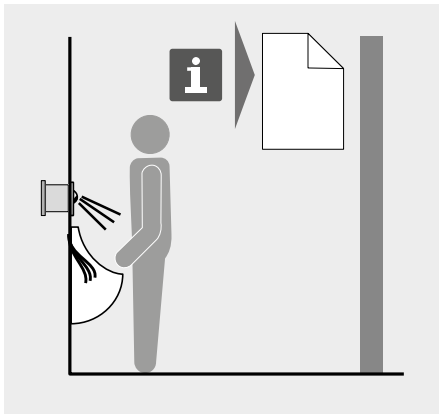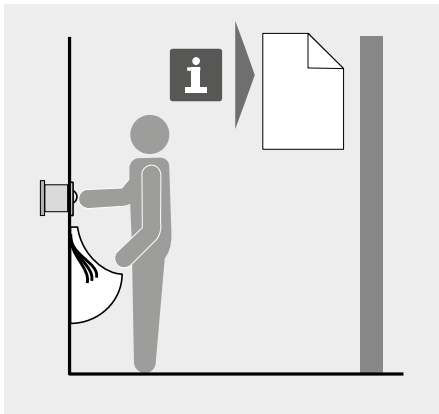

230V
2x 0,75 mm²

03.020.00..0000

