


⚡ 220 - 240 V loser Netzanschluss ( laut VDE 0100 Teil 701 )

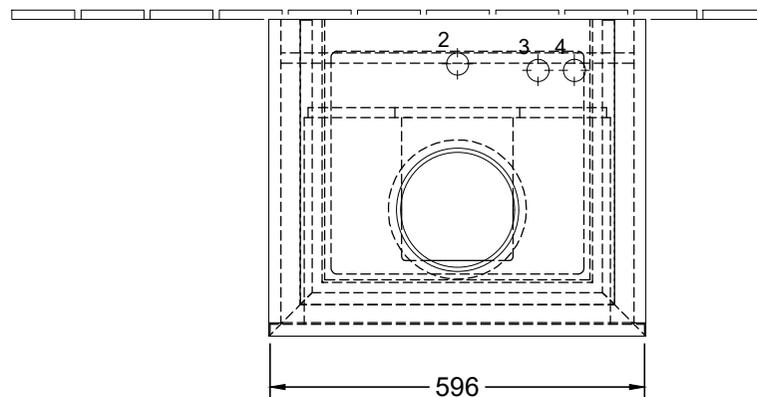

	1	2	3	4	H2	A1
5144 00 / 01	X		X	X	1010	590
5148 00 / 01	X	X	X	X	1010	590
5149 00 / 01	X	X	X	X	1010	590
5149 10 / 11	X				1010	590
4125 40 / 41	X		X	X	1070	630
4110 45	X			X	1090	600
4179 43	X		X	X	1010	590
4178 41	X				1010	590
4A1840	X		X	X	1090	590
4A2138	X	X		X	1090	590
4A1956	X	X	X	X	1090	590
4A2056	X	X	X	X	1090	590

 <b>Villeroy &amp; Boch</b> <small>1748</small>	<b>B568 00/LOXX</b>	Zeichner	EDST	11.12.2018
	<b>WT-Unterschrank</b>	<b>LEGATO</b>		
	Typenzeichnung	1:12		

Diese Zeichnung ist unser geistiges Eigentum und darf ohne unsere Genehmigung nicht kopiert oder Dritten zugänglich gemacht werden.