


RS50 80x80/90x90/100x100

Achtung! Gläser niemals ungeschützt auf den Boden stellen.
Verletzung der Glaskante führt zu Glasbruch.

Caution! Never put glass walls on the floor without protection.
Damaging the glass edges results in breaking of the glass.

Attention! Jamais placer des parois de douche en verre au sol sans
protection. Des verres endommagés casseront.



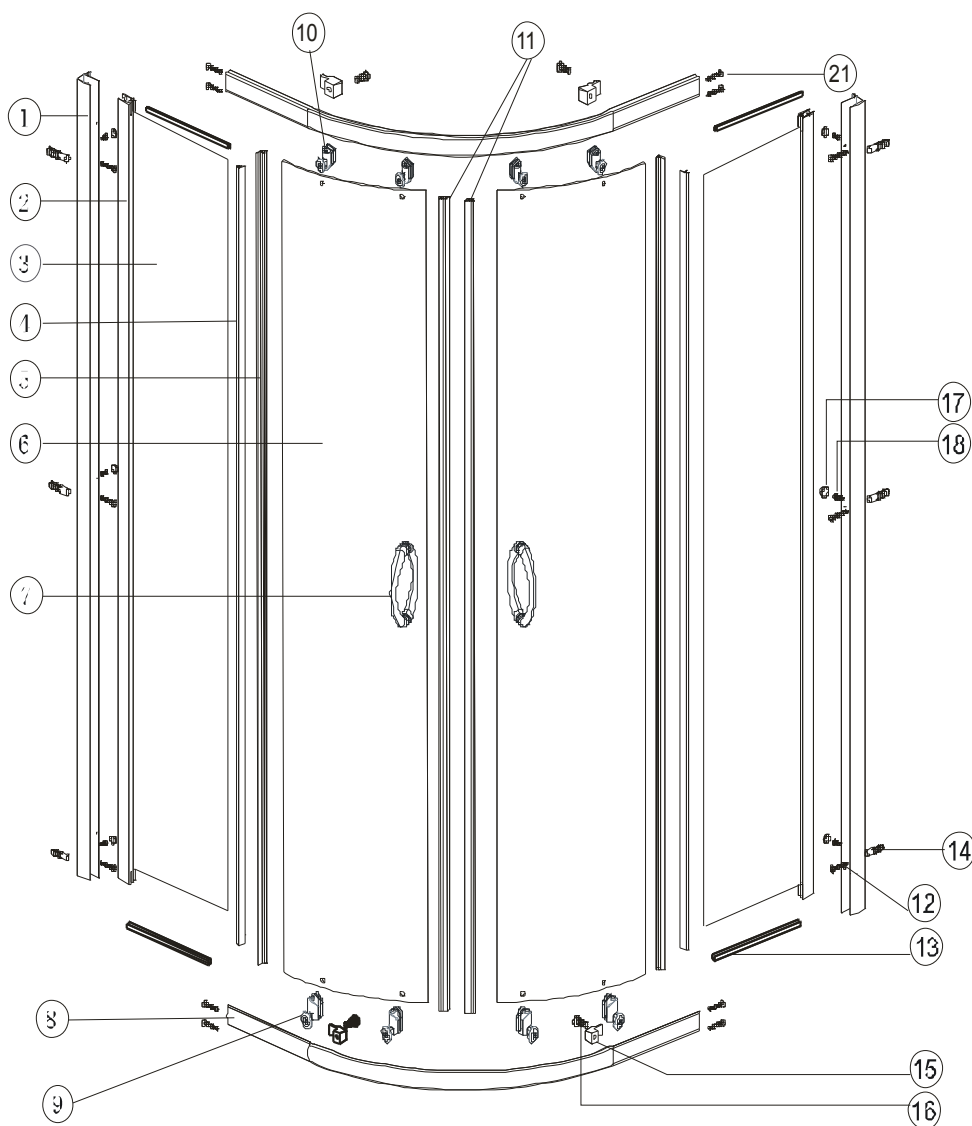


- | | | |
|---|----------------|---|
| (1) ZBSOLO-1 | (10) ZBSOLO-10 |  x4 |
| (2) ZBSOLO-2 | (11) ZBSOLO-11 |  x1 |
| (3) ZBSOLO-3 | (12) ZBSOLO-12 |  x8 |
| (4) ZBSOLO-4 | (13) ZBSOLO-13 |  x8 |
| (5) ZBSOLO-5 | (14) ZBSOLO-14 |  x8 |
| (6) ZBSOLO-6 | (15) ZBSOLO-15 |  x4 |
| (7) ZBSOLO-7  x2 | (16) ZBSOLO-16 |  x4 |
| (8) ZBSOLO-8  x2 | (17) ZBSOLO-17 |  x12 |
| (9) ZBSOLO-9  x4 | (18) ZBSOLO-18 |  x6 |




Zum Aufbau benötigen Sie
for mounting you need
pour l'installation il vous faut




1

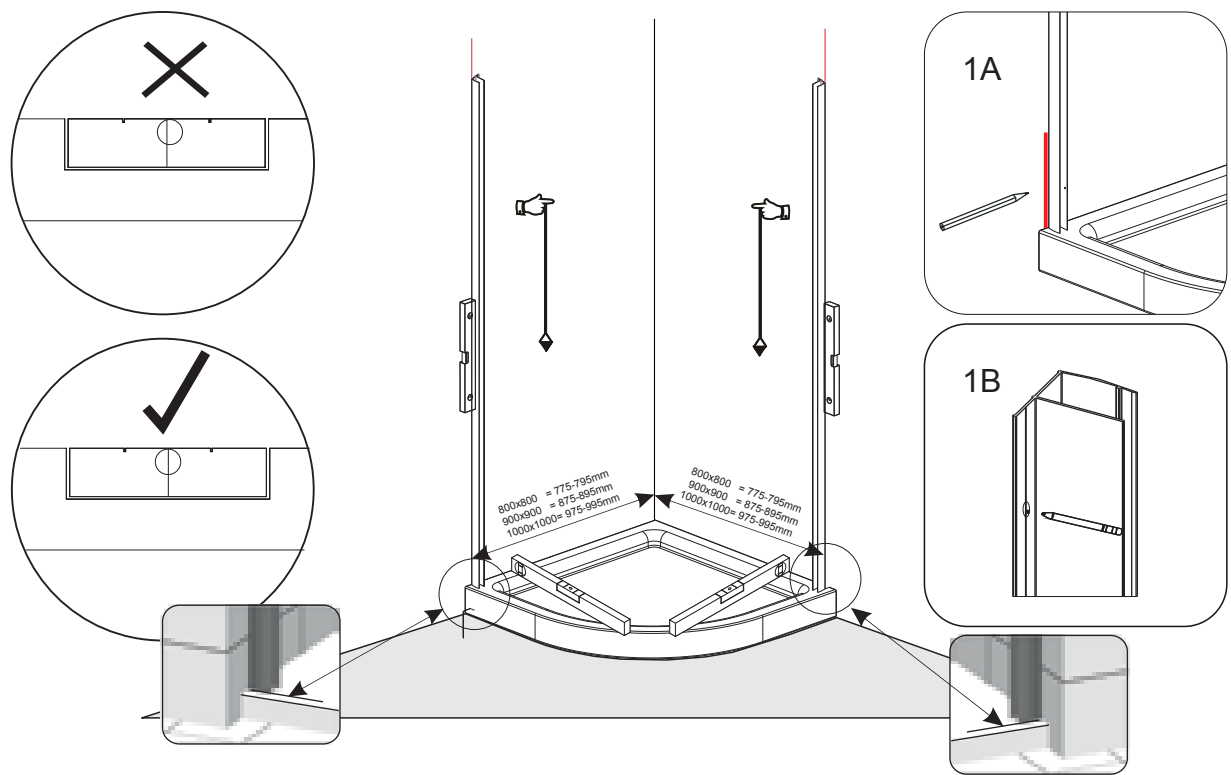

2

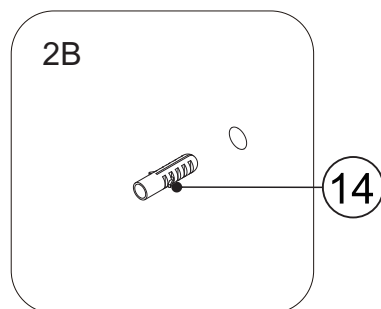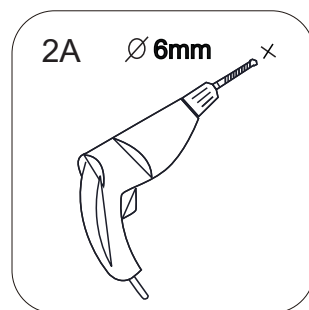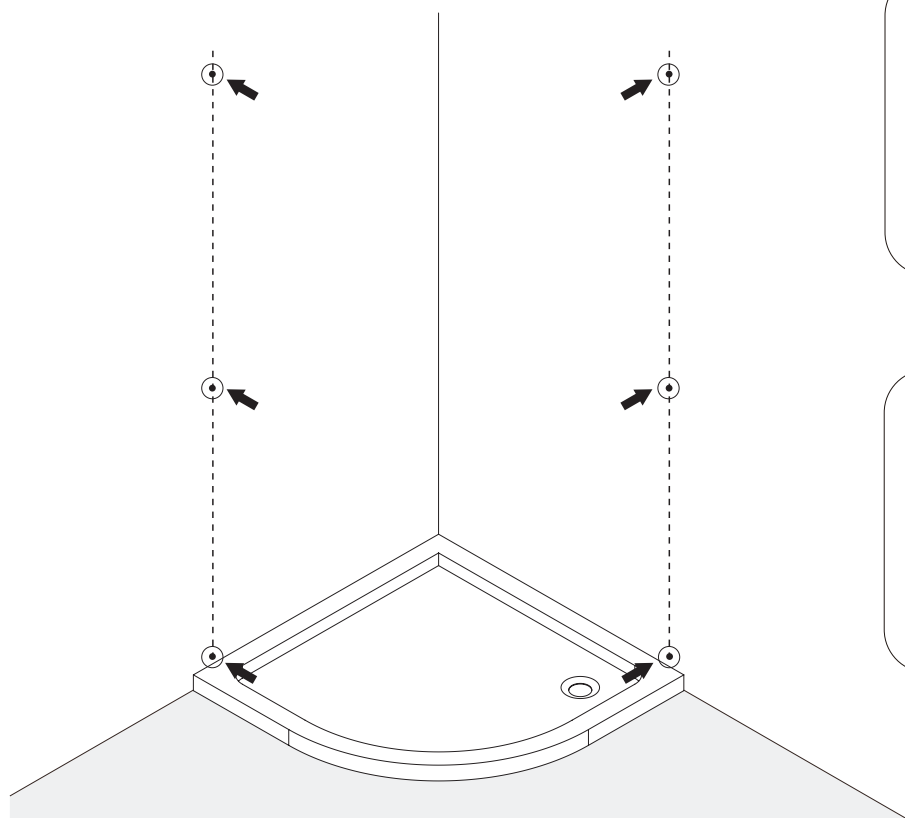


3

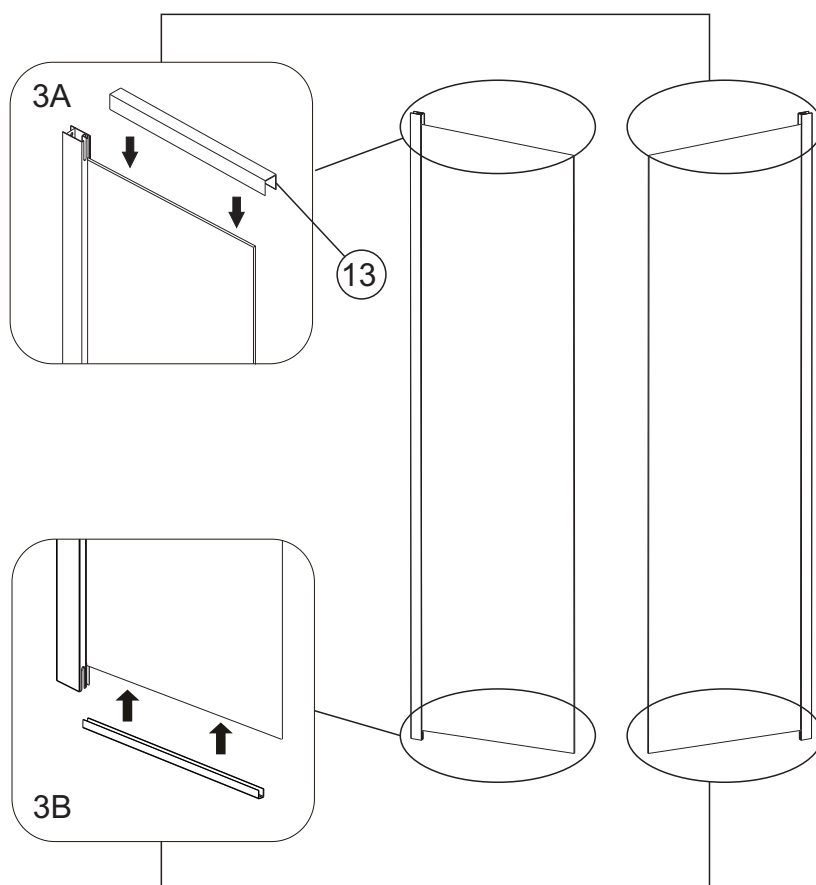


3


4

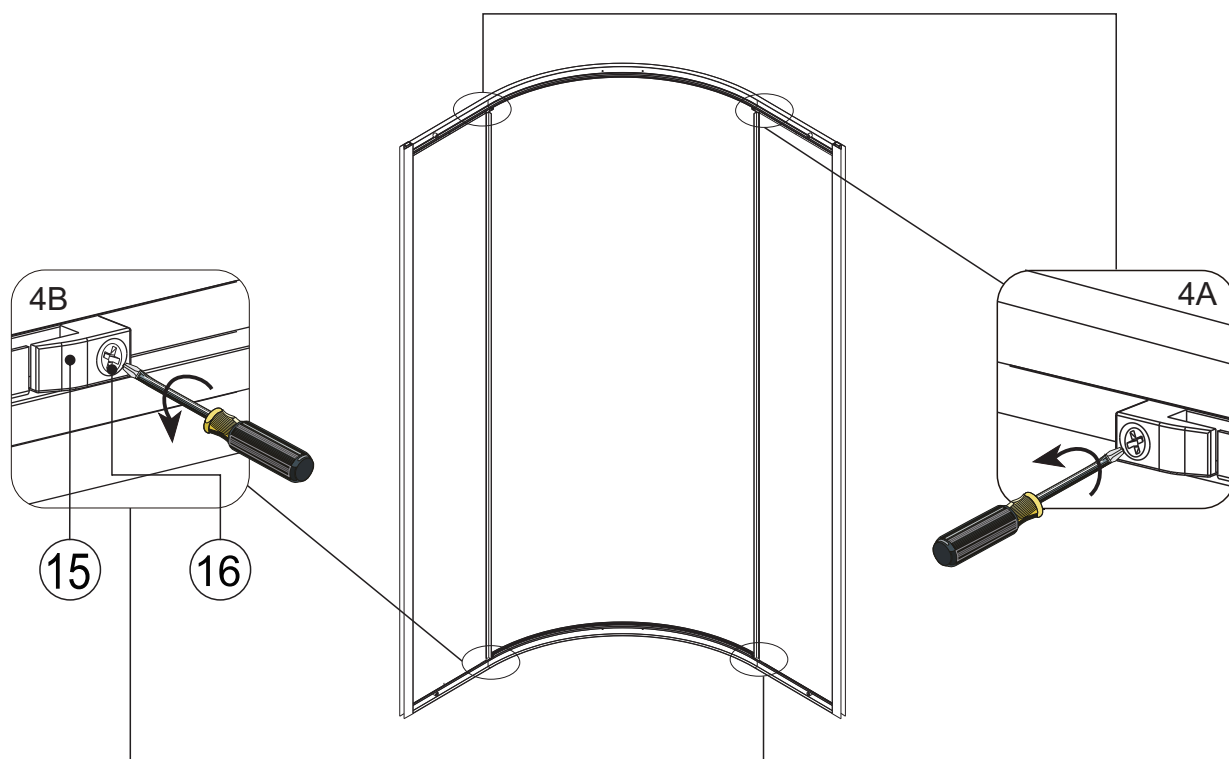

5

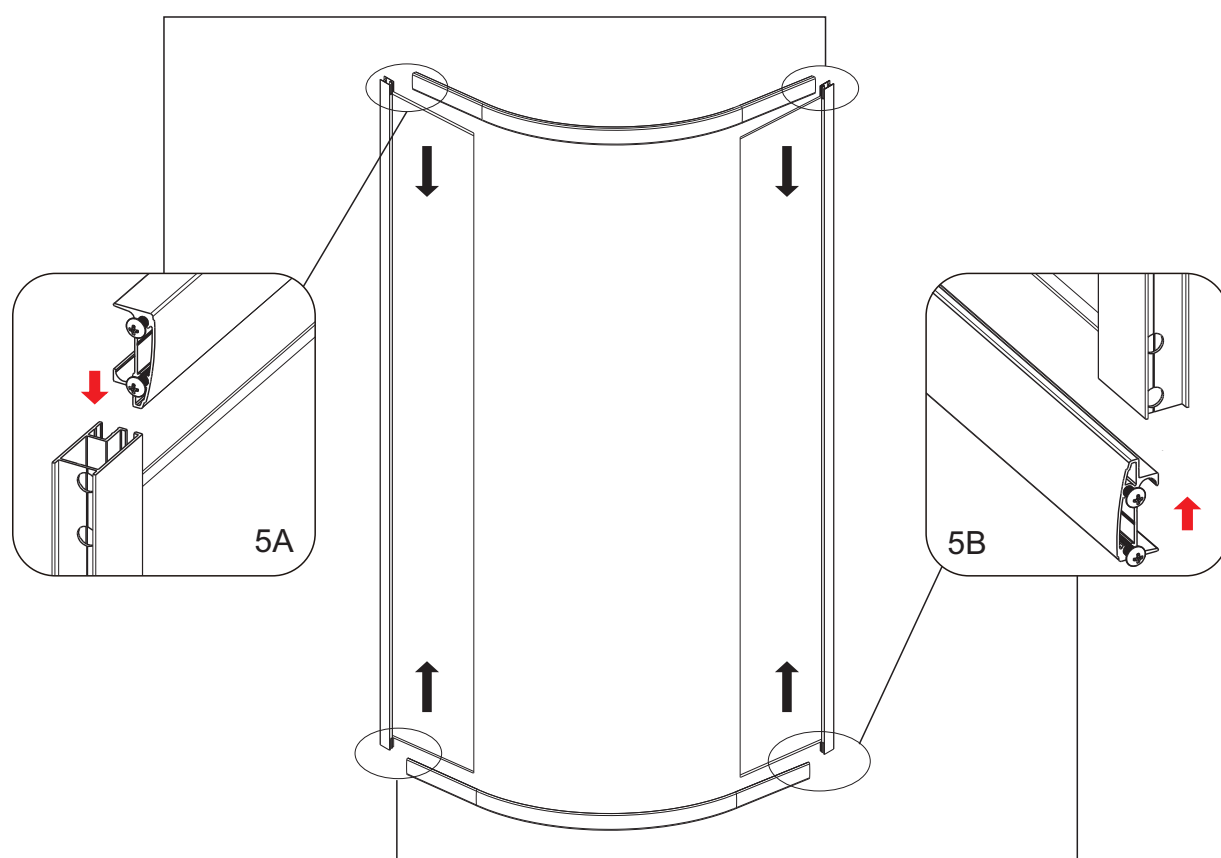


6

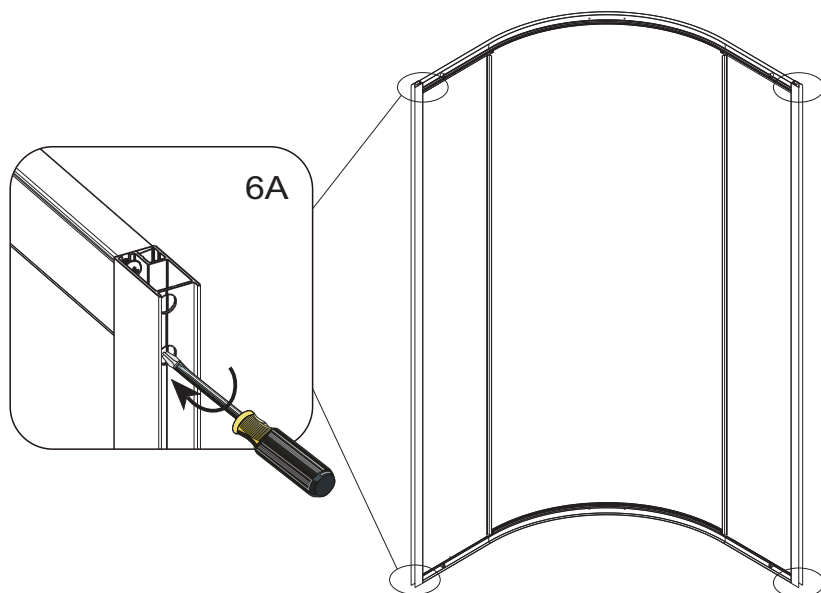




⚠ Nicht zu fest anziehen
Do not over tighten the screws

7

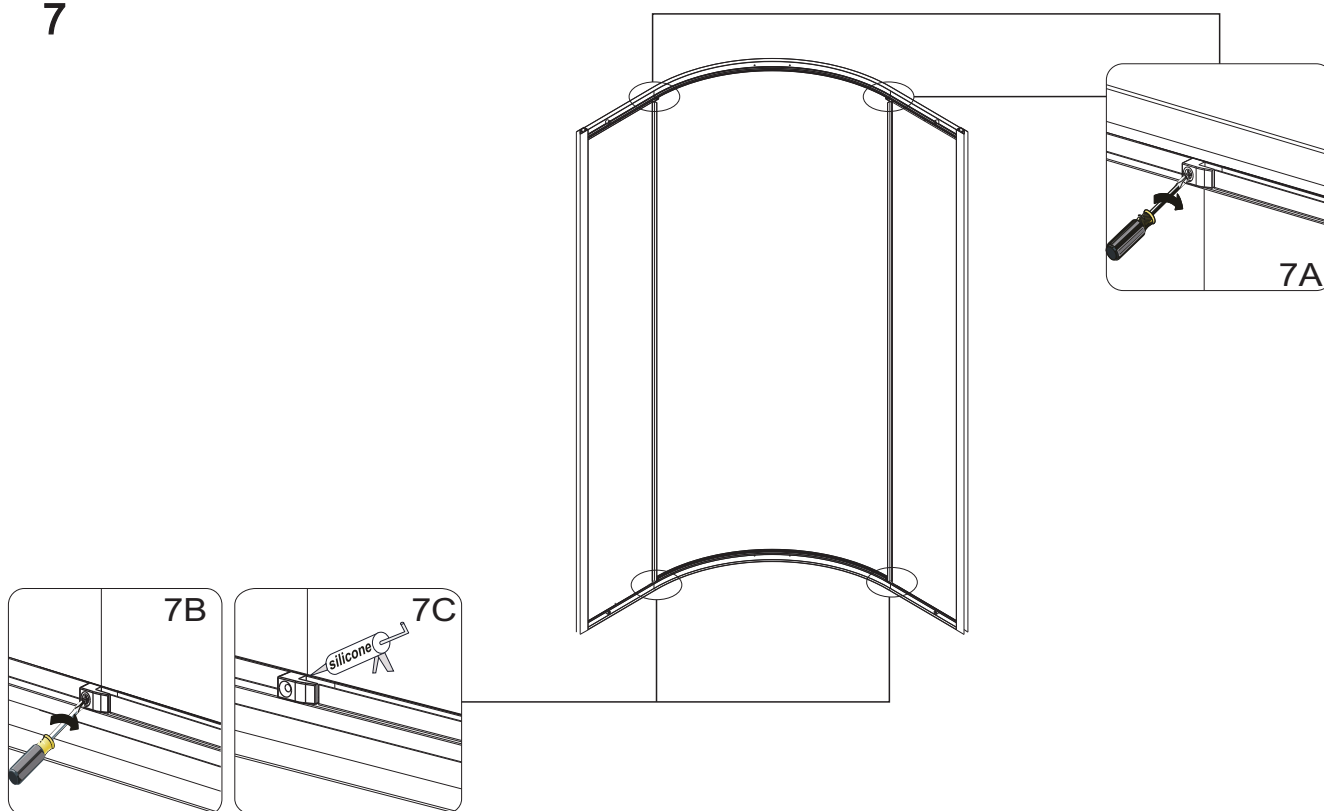


5

8

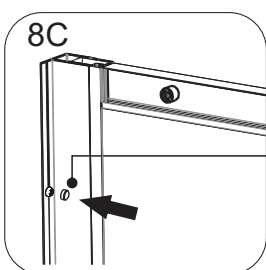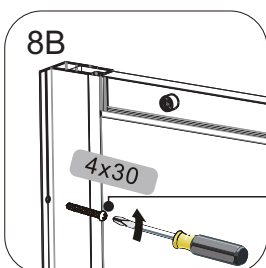
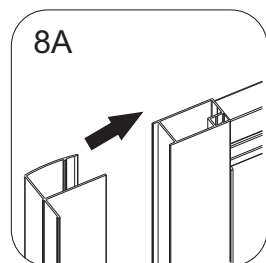


18


17

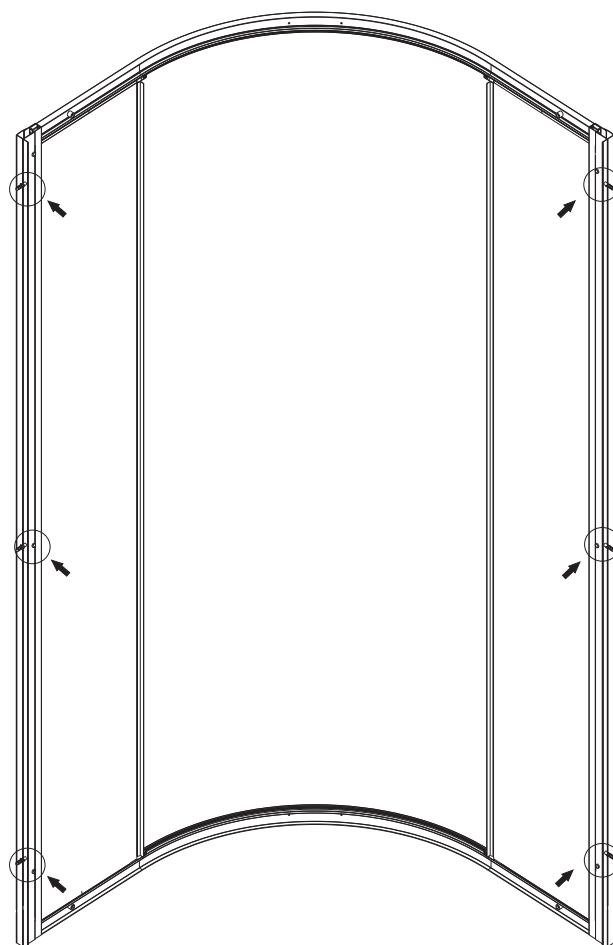


9

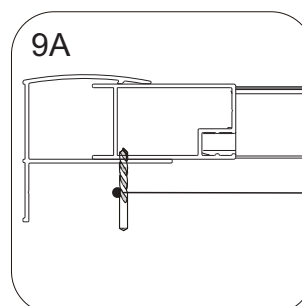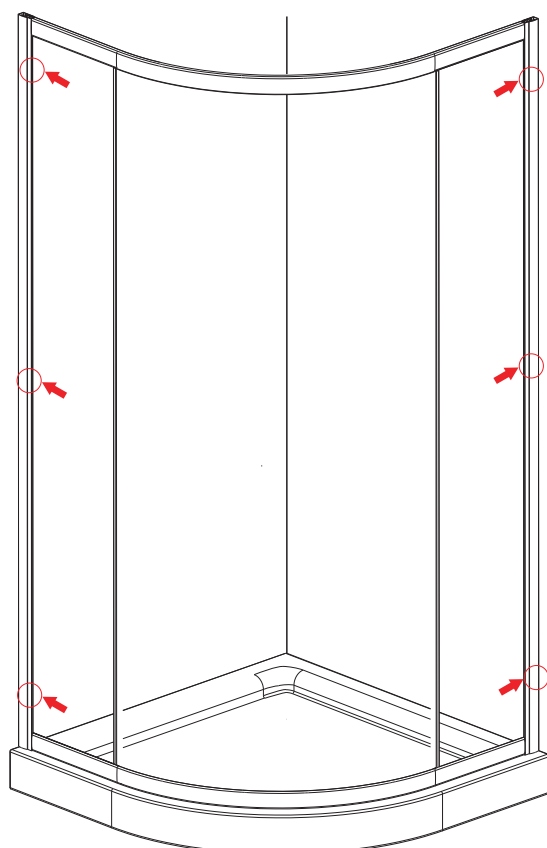

(Ø3mm)





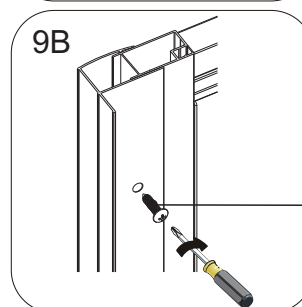


18

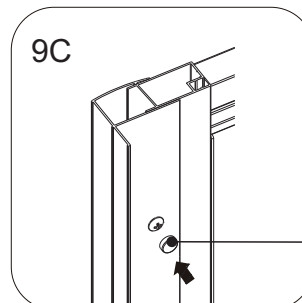


17

10

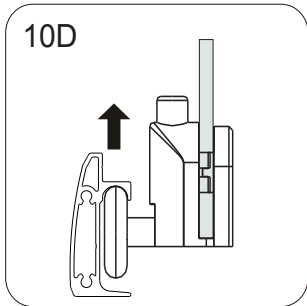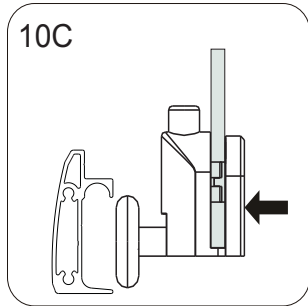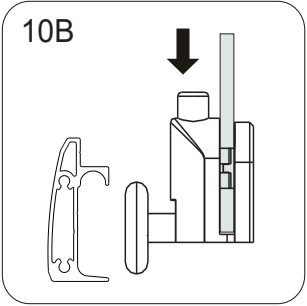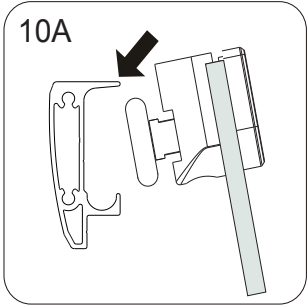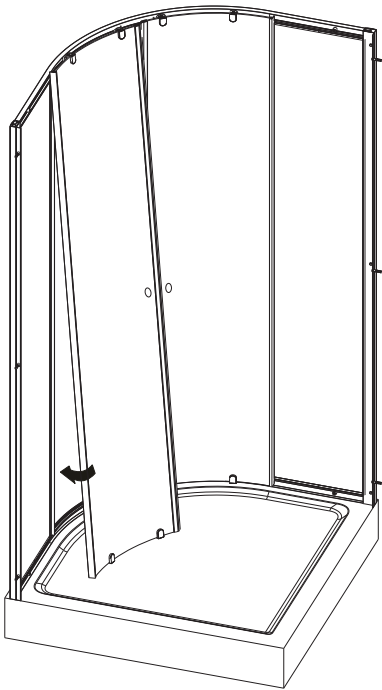

11

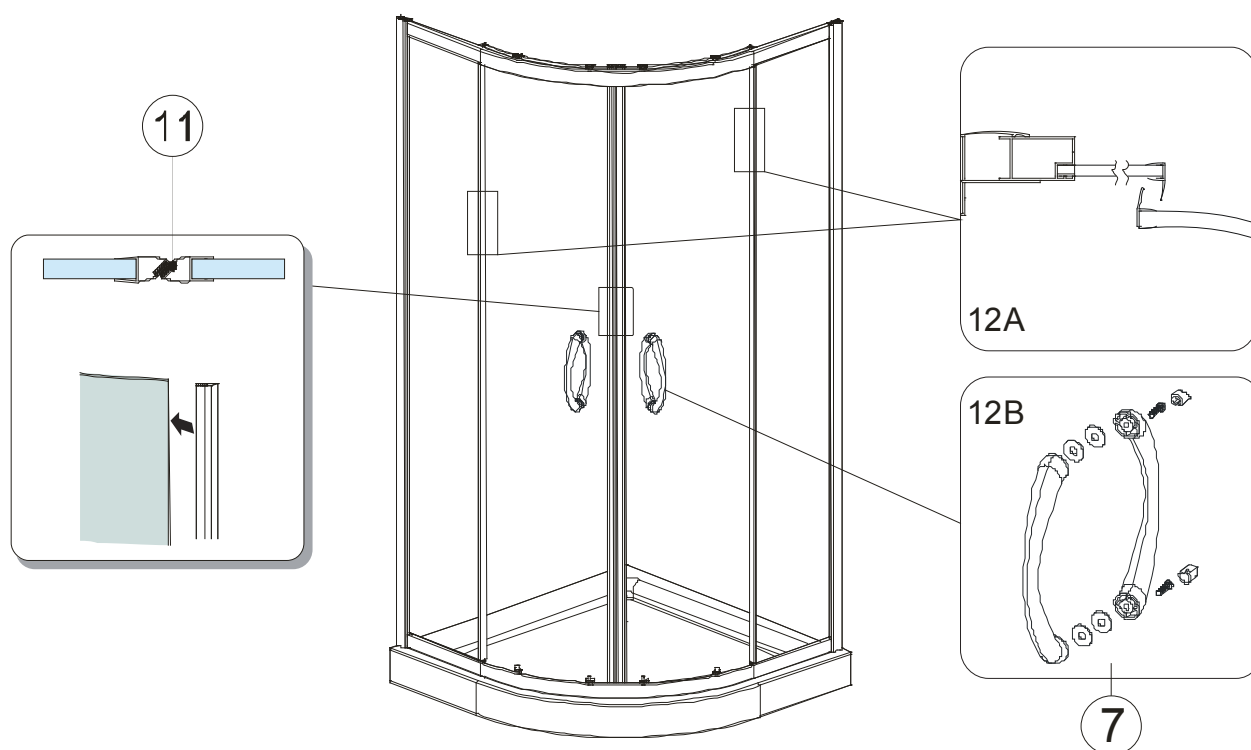

12

