

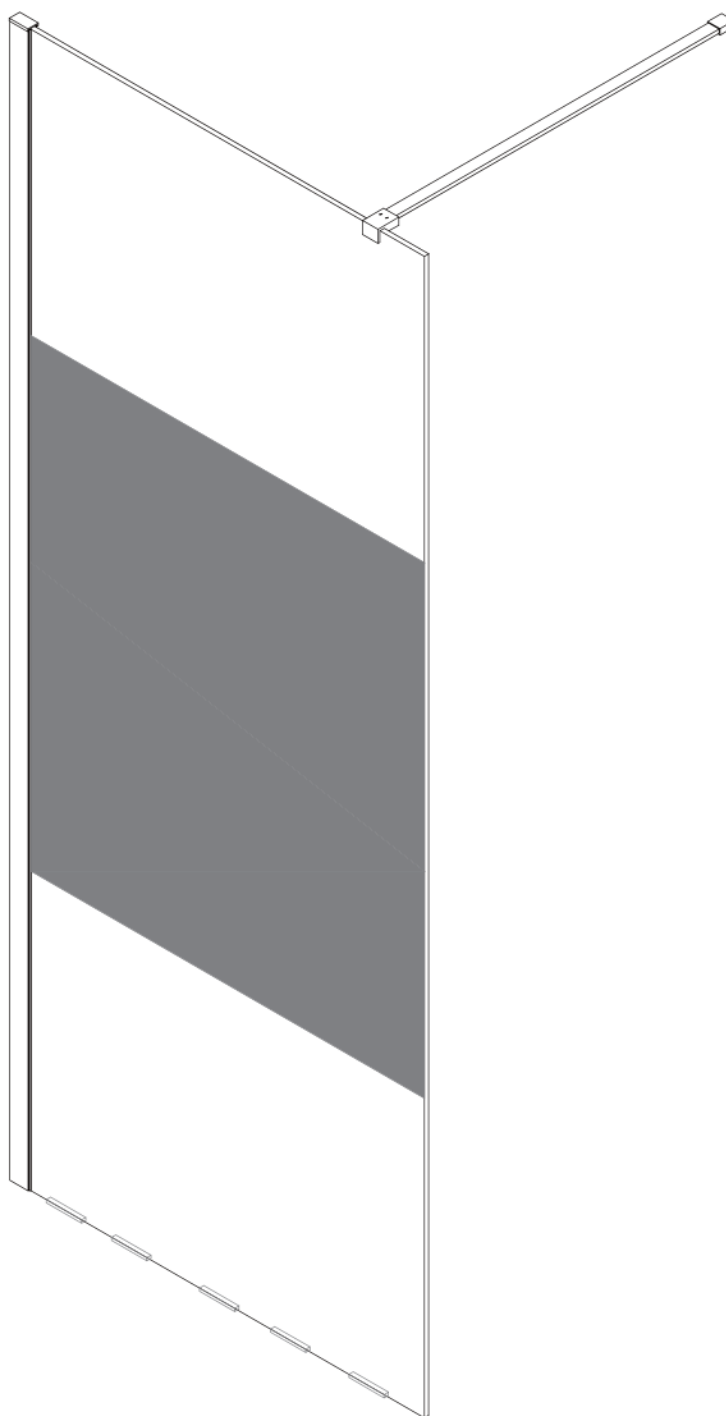
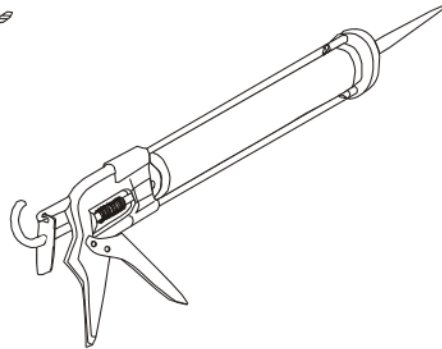
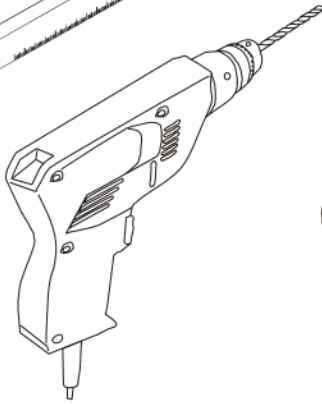
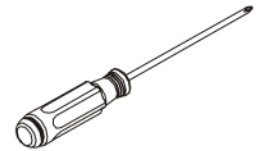


## Side glass


### Installation instructions

( For 2120-60S/70S/80S/90S/100S/110S/120S/130S/140S )




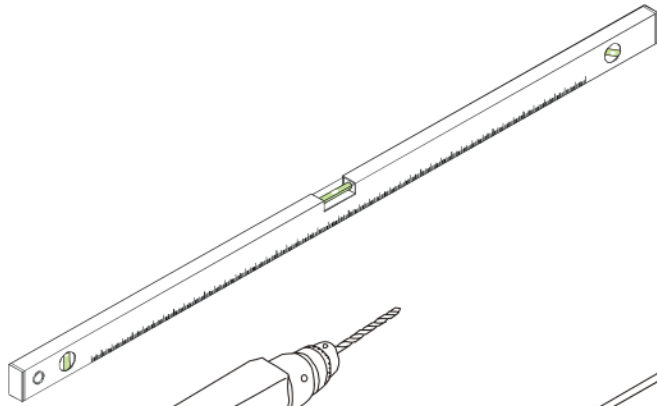

Φ 3mm



















Φ 8mm

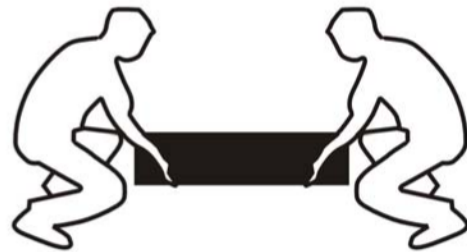

1



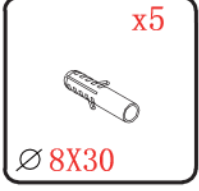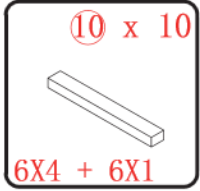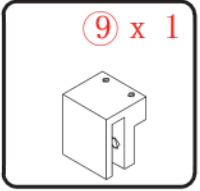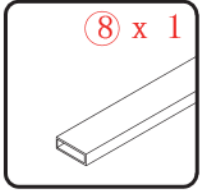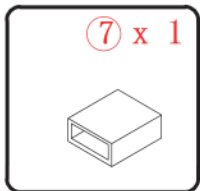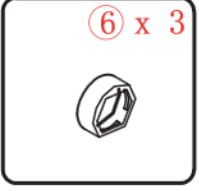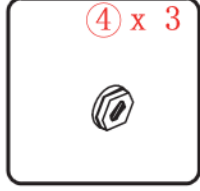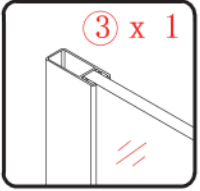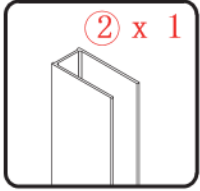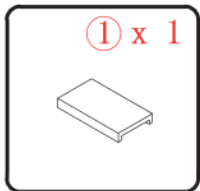
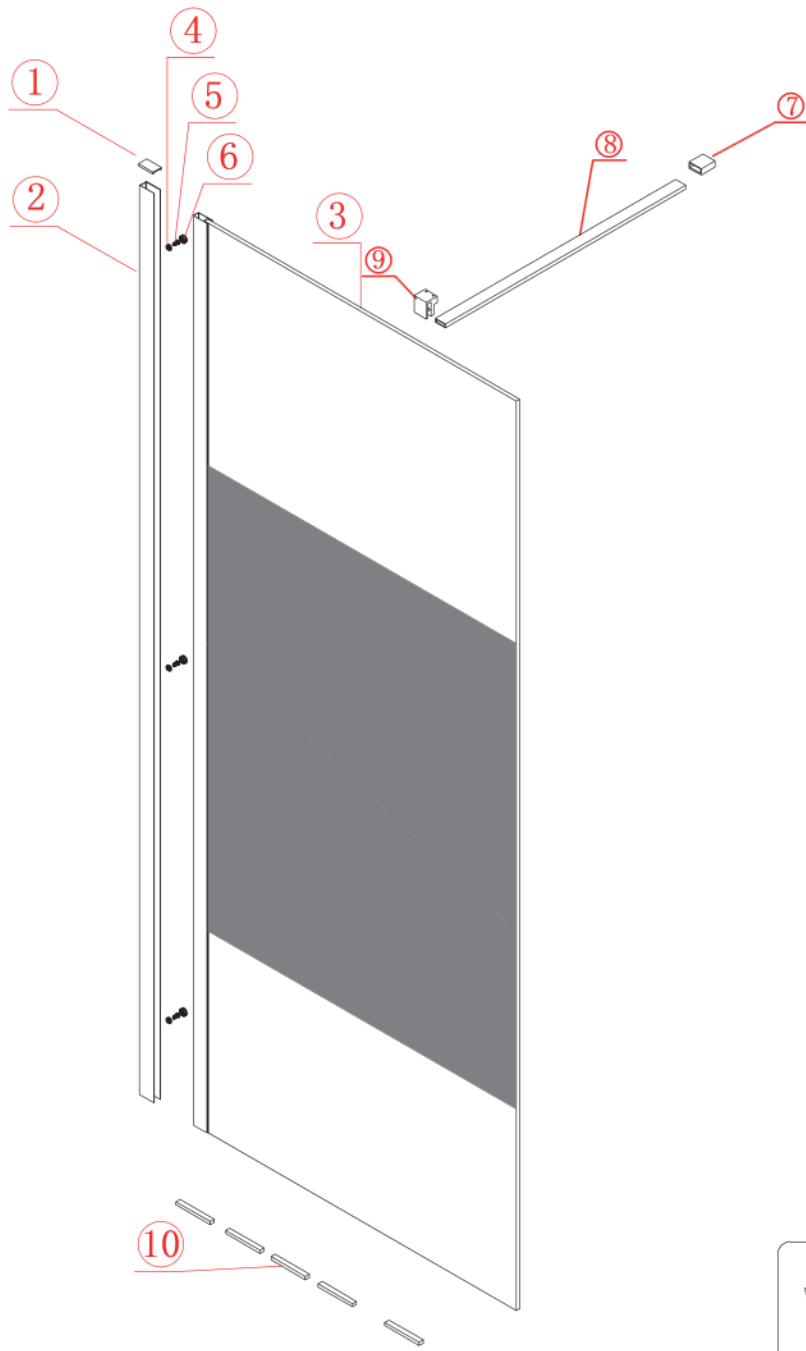


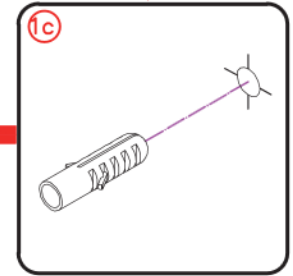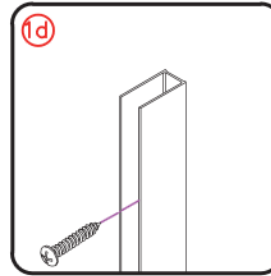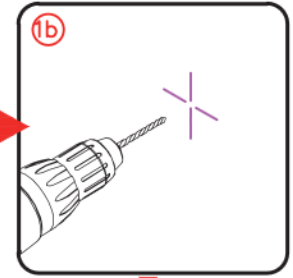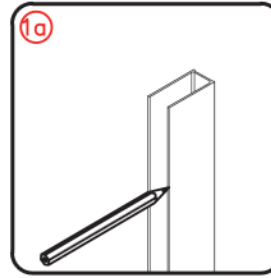






x3














x3

3

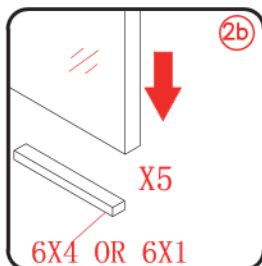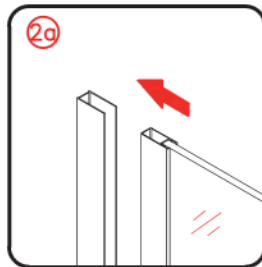

Ø3mm

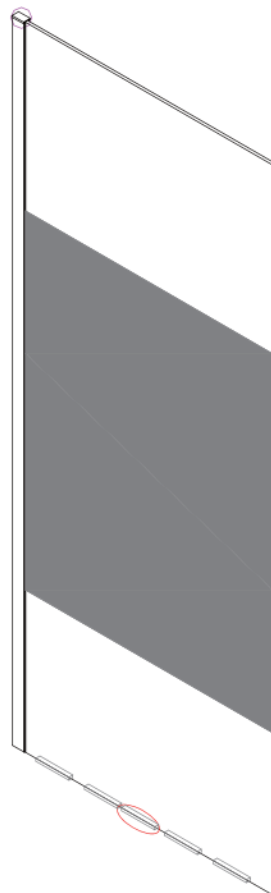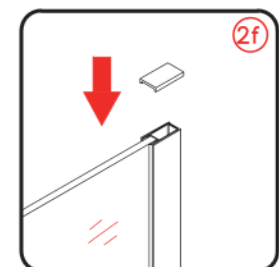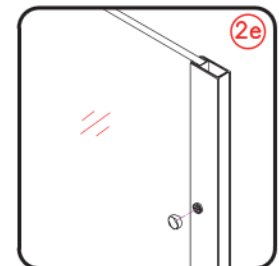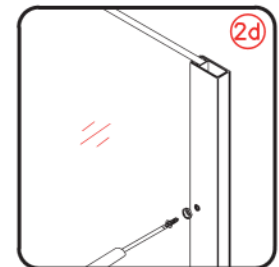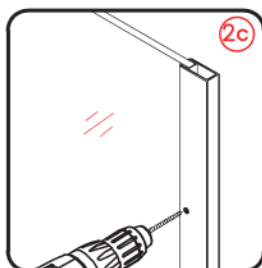

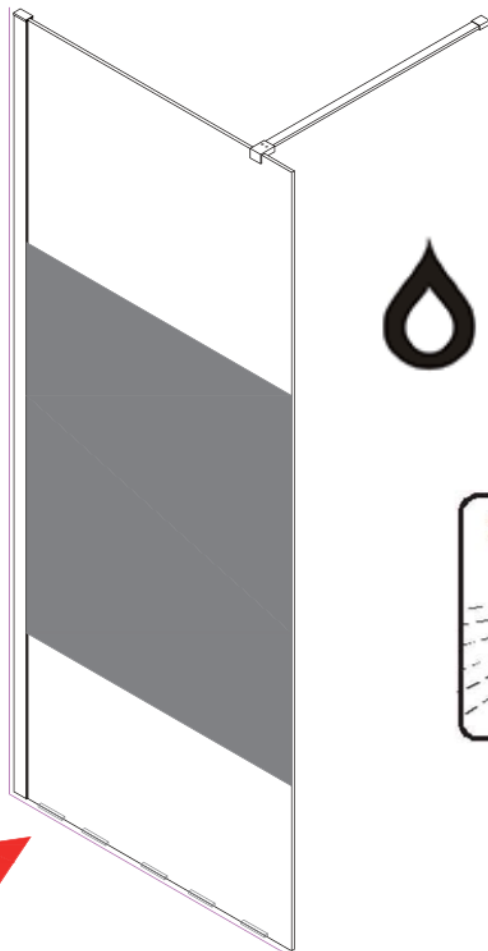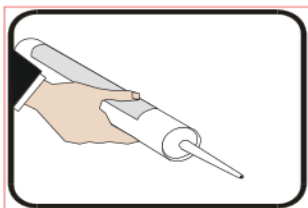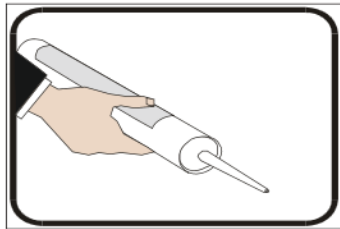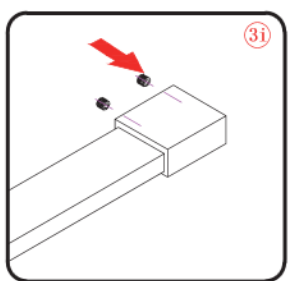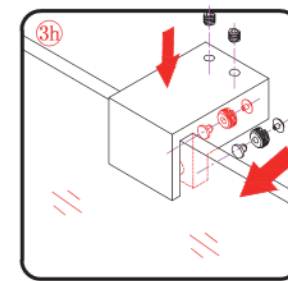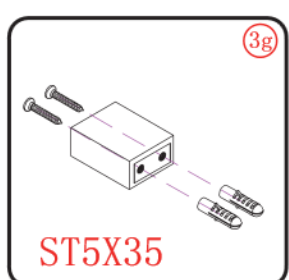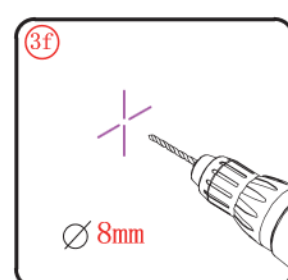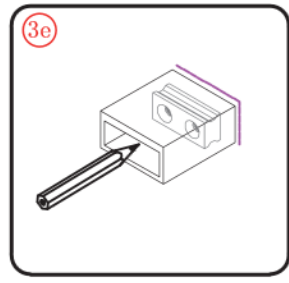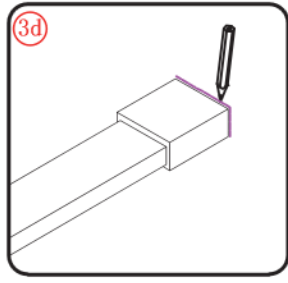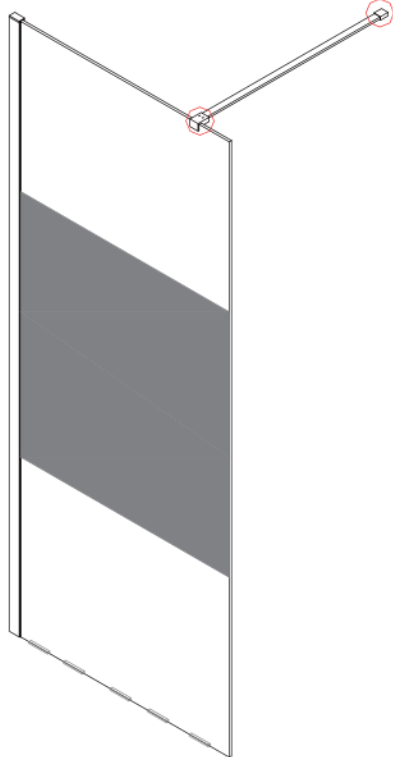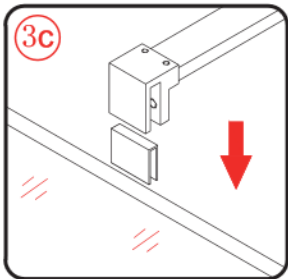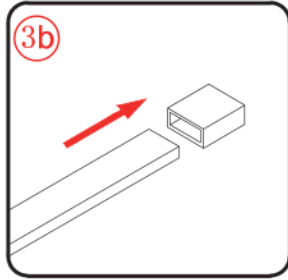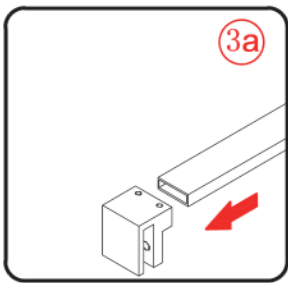

Coated Glass



