


Planplus U-Kabine mit Doppelpendeltür

Achtung! Gläser niemals ungeschützt auf den Boden stellen.
Verletzung der Glaskante führt zu Glasbruch.

Caution! Never put glass walls on the floor without protection.
Damaging the glass edges results in breaking of the glass.


Attention! Jamais placer des parois de douche en verre au sol sans protection. Des verres endommagés casseront.

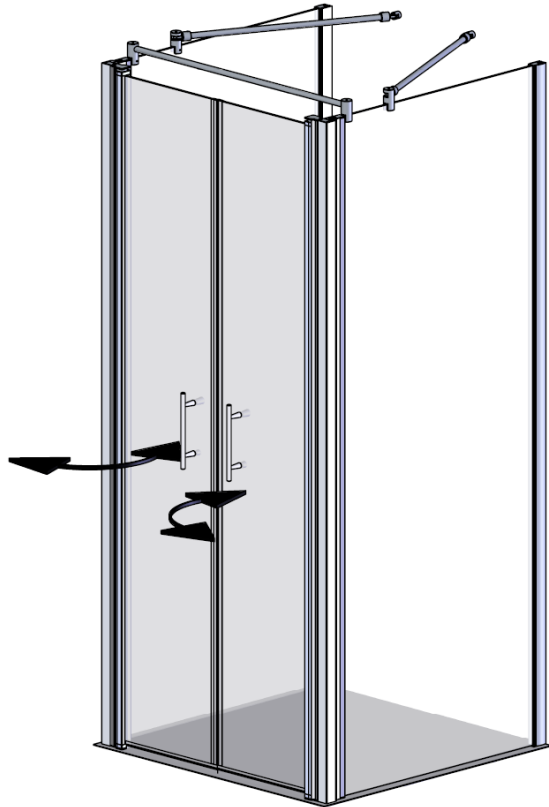

Die abgebildeten Formen der Profile und Griffe dienen der schematischen Darstellung und entsprechen nicht dem tatsächlichen Lieferumfang!







Mitgeliefertes Montagematerial
supplied assembly material
matériaux pour assemblage

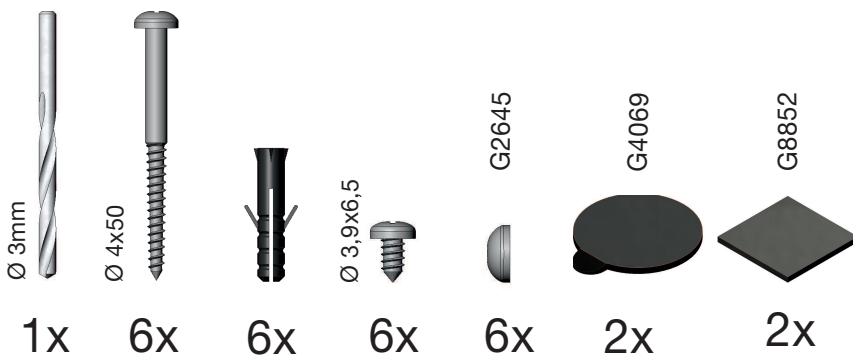





Zum Aufbau benötigen Sie
for mounting you need
pour l'installation il vous faut



Planplus U-Kabine mit Doppelpendeltür

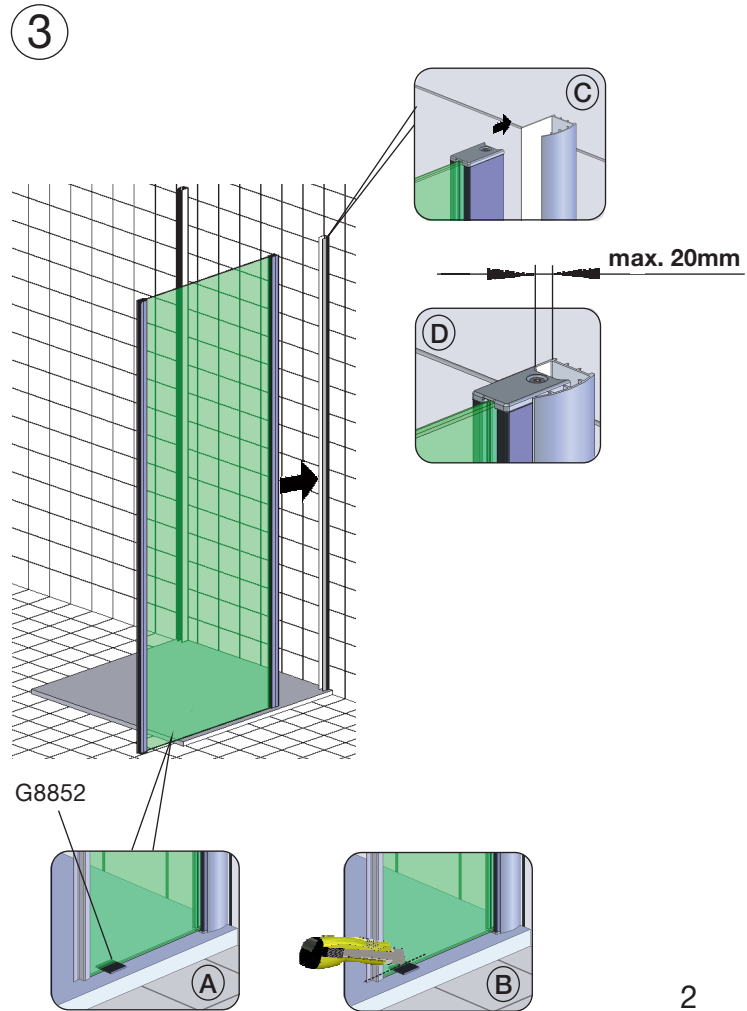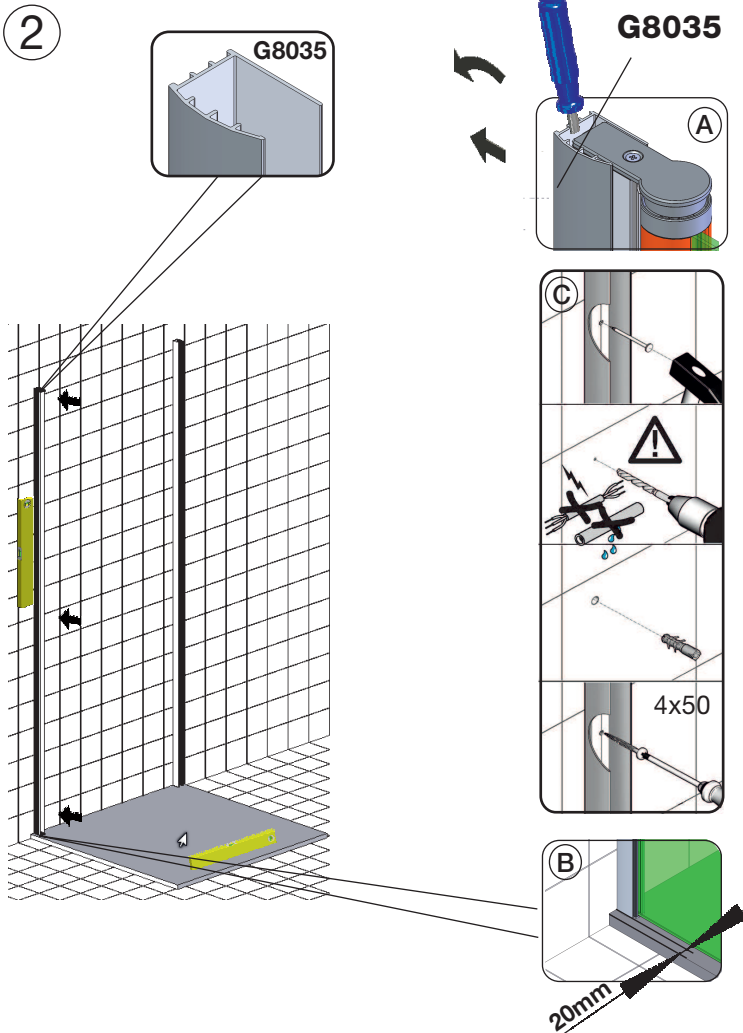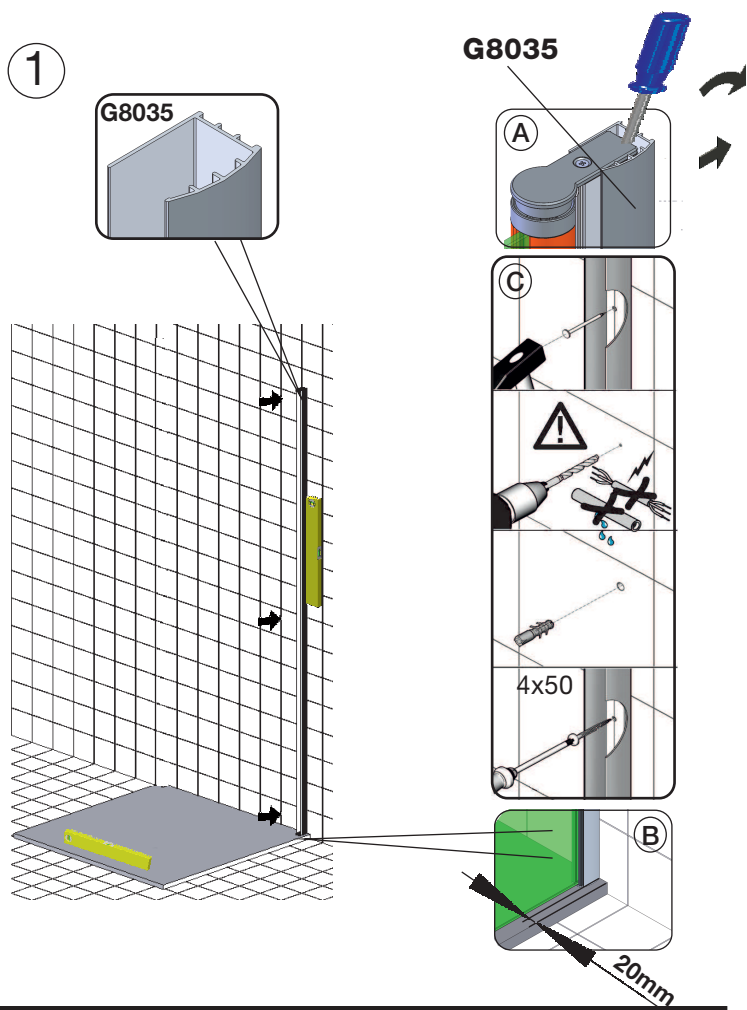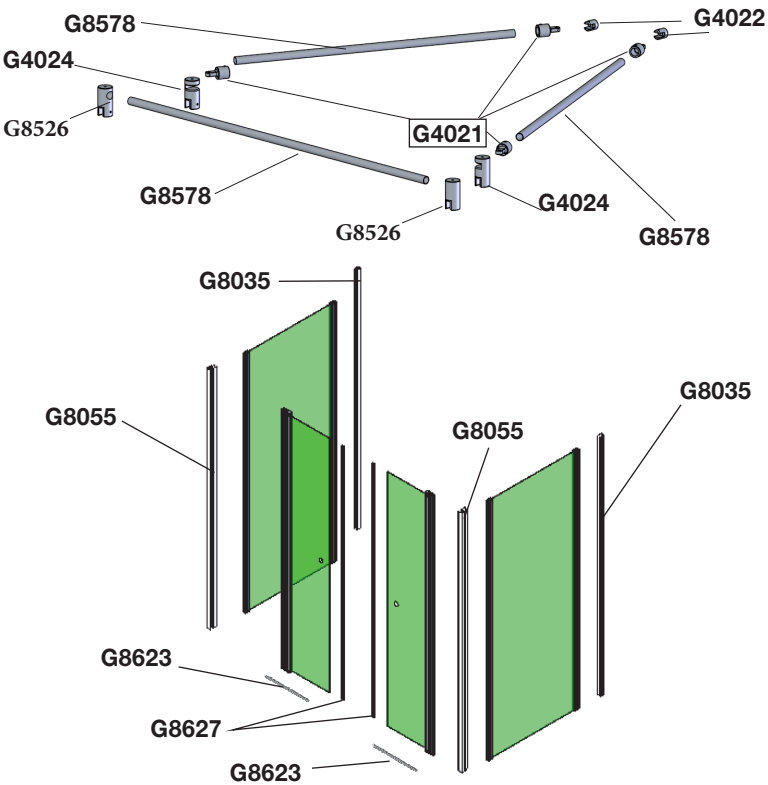

Planplus U-Kabine mit Doppelpendeltür

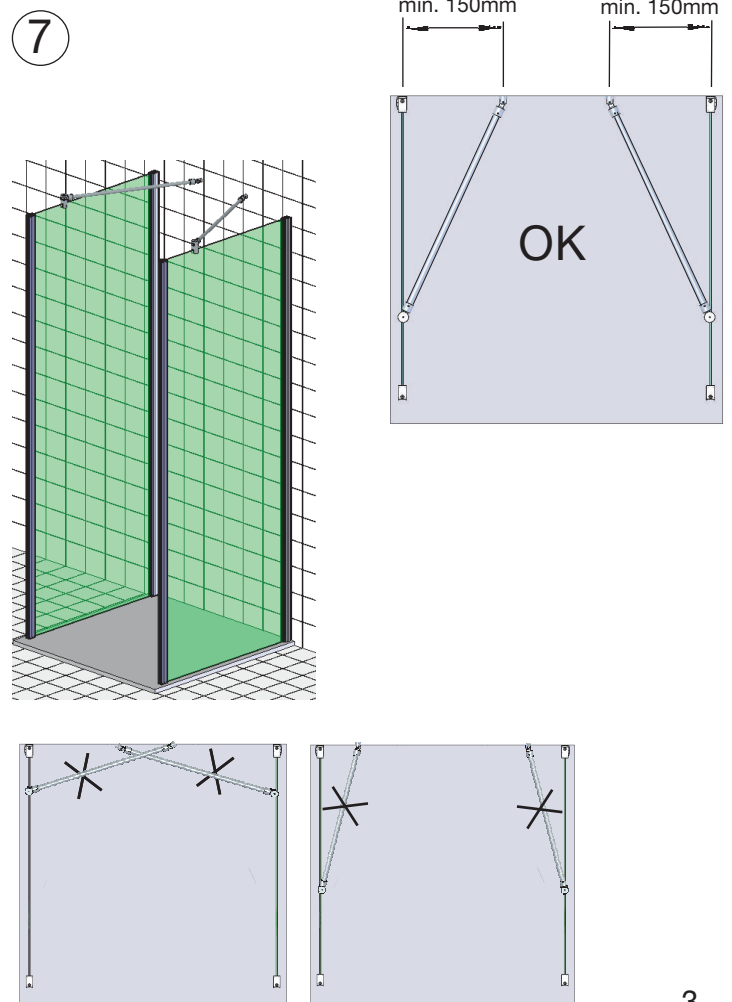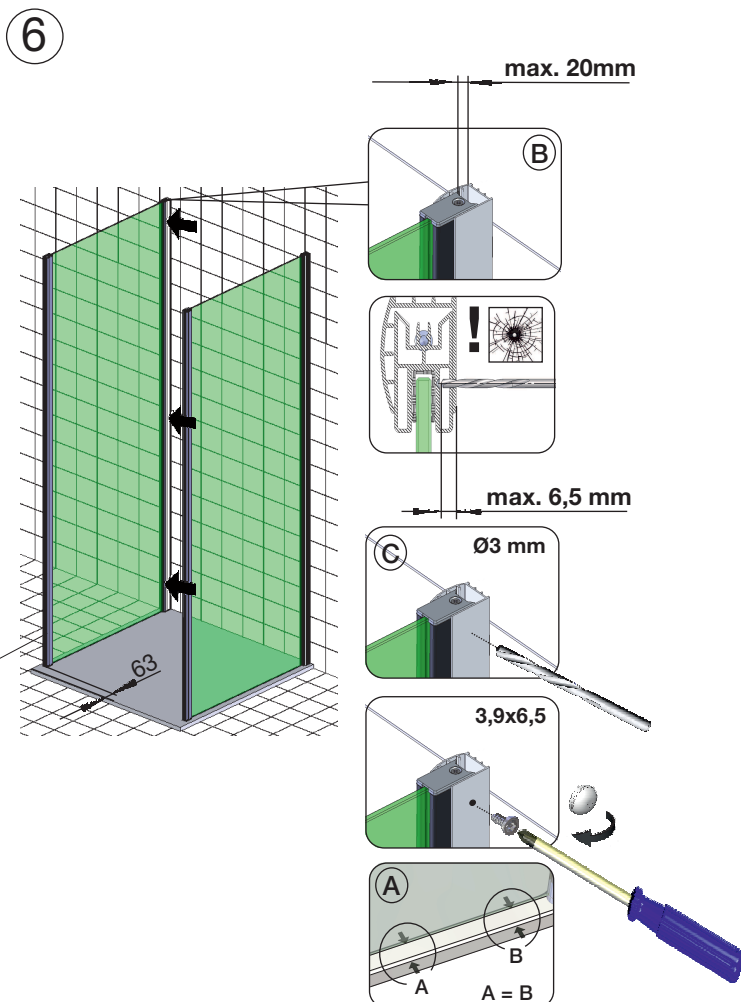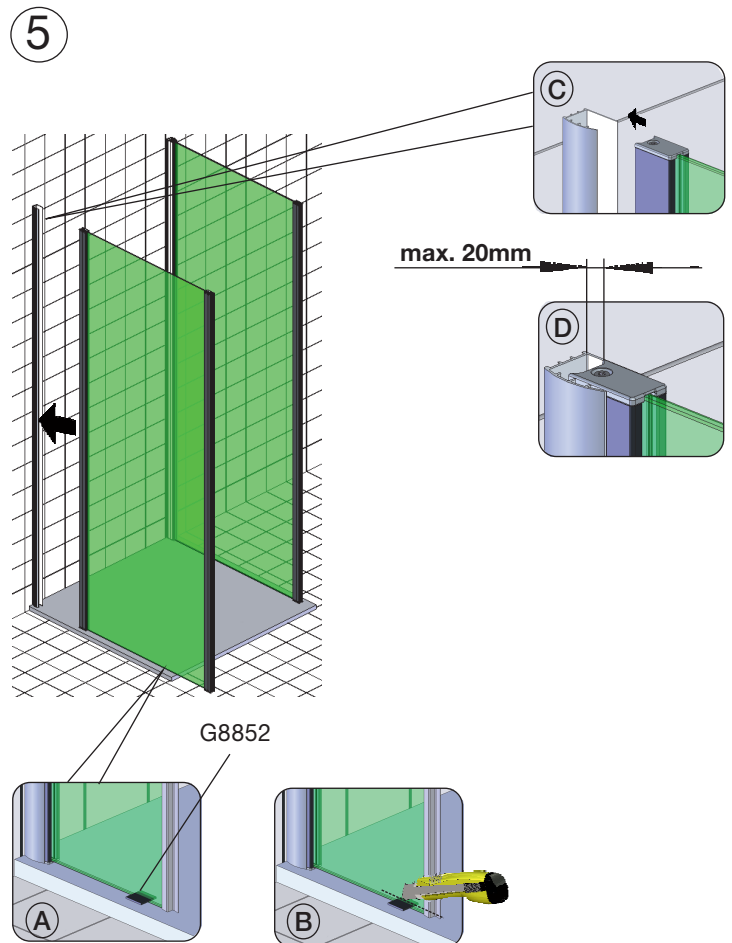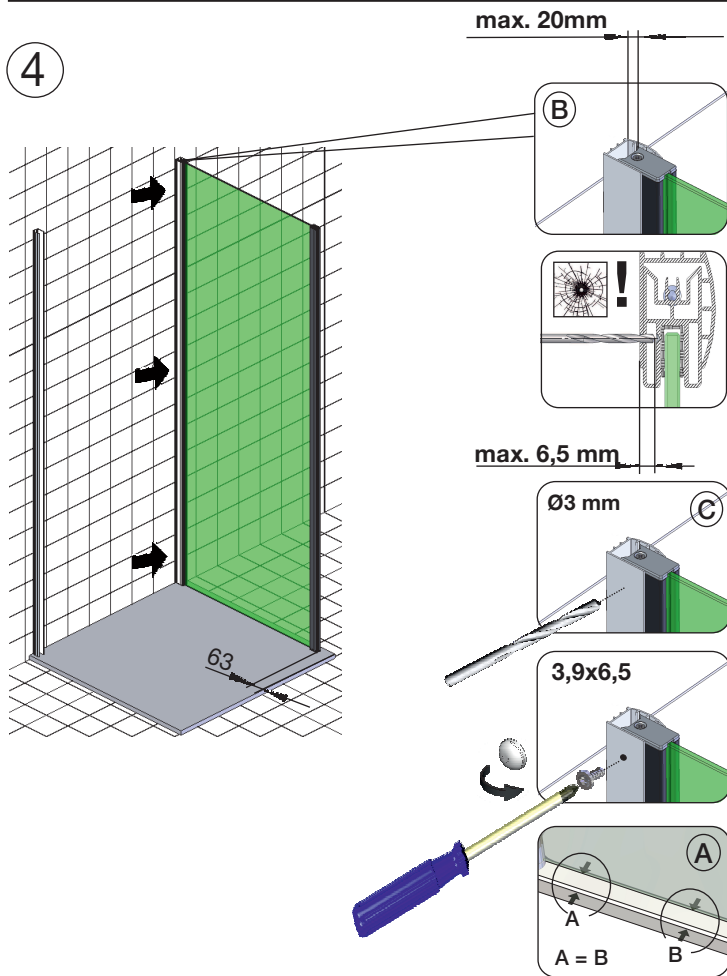

Planplus U-Kabine mit Doppelpendeltür

8

Diagram 8 shows the overall layout of the double-hung door system. It includes a top view showing the width W and the distance y from the side wall to the door edge. A side view shows the door height and the distance 11 from the floor to the bottom of the door. A detail view shows the door edge with dimensions 22 , 34 , 63 , 30 , and 20 .

$y =$	
$\frac{W}{2} =$	

$X =$	
-------	--

$X \text{ Standard} = 5,5 \text{ mm}$
 $X \text{ max.} = 20,0 \text{ mm}$


$$X = \frac{W}{2} + 34 - 11 - y$$

9


Diagram 9 shows the installation steps for the left door. It includes a top view showing the door being moved into position. A side view shows the door being moved into position. A detail view shows the door edge with dimensions 11 and $Tuer$. A detail view shows the door edge with dimensions 11 and $Tuer$.

10



Diagram 10 shows the installation steps for the right door. It includes a top view showing the door being moved into position. A side view shows the door being moved into position. A detail view shows the door edge with dimensions 11 and $Tuer$. A detail view shows the door edge with dimensions 11 and $Tuer$.

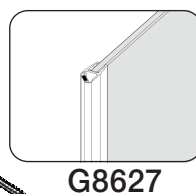


G8627

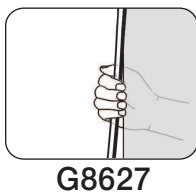


G8627

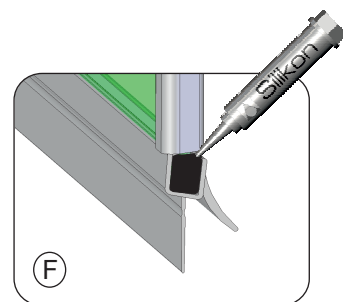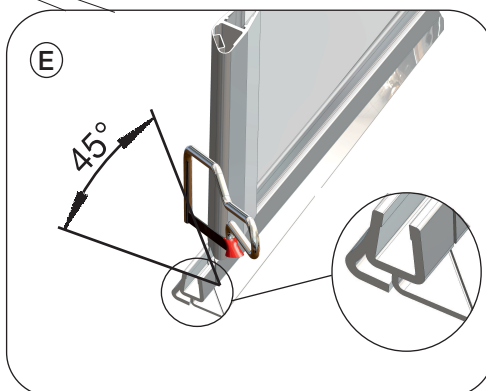


12

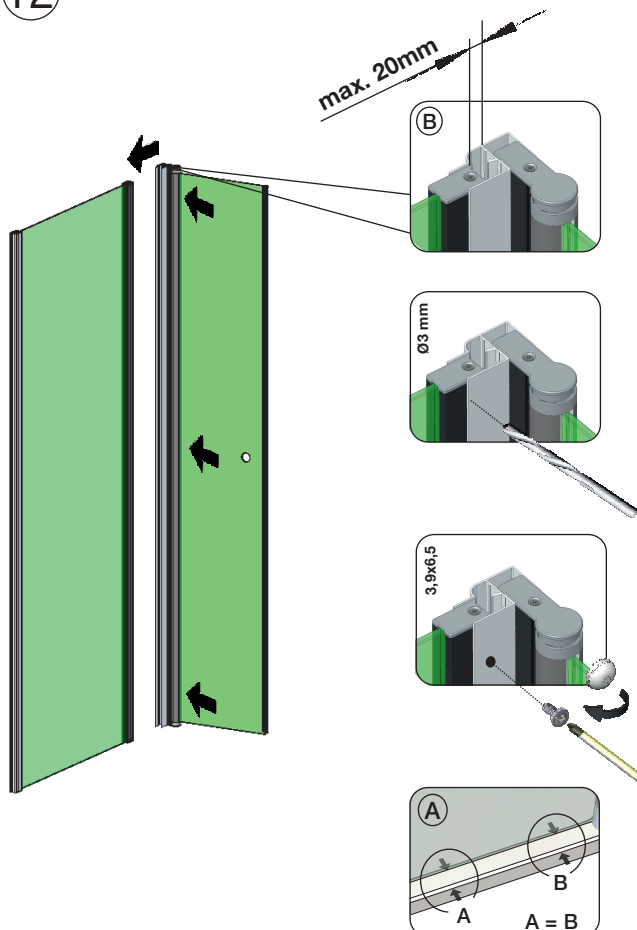

13

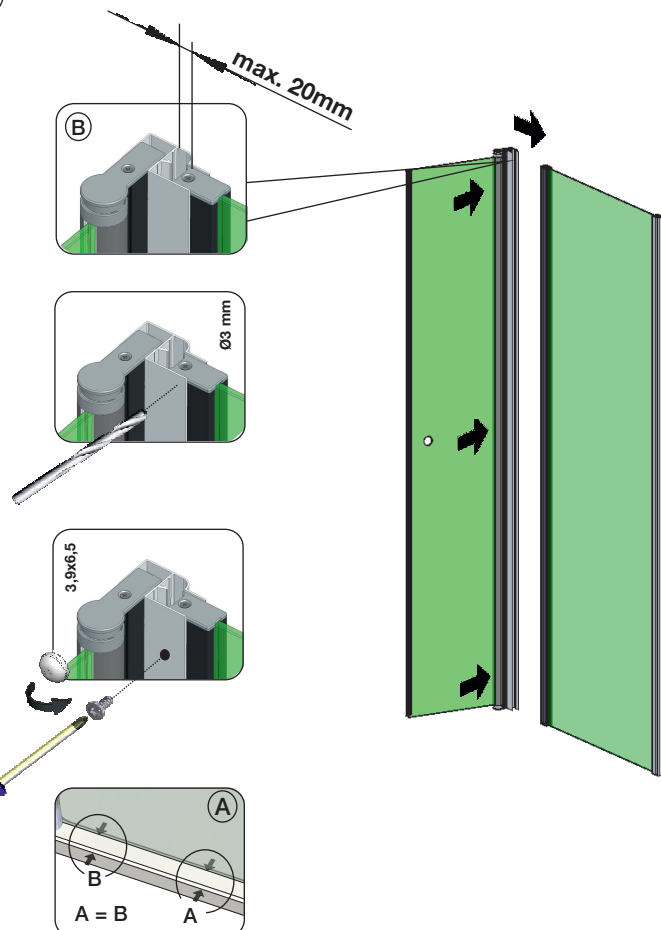


14

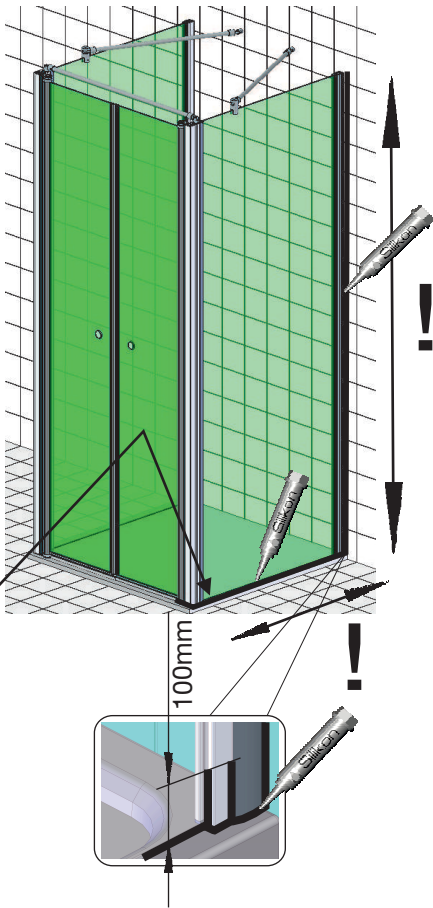


STOP !

15

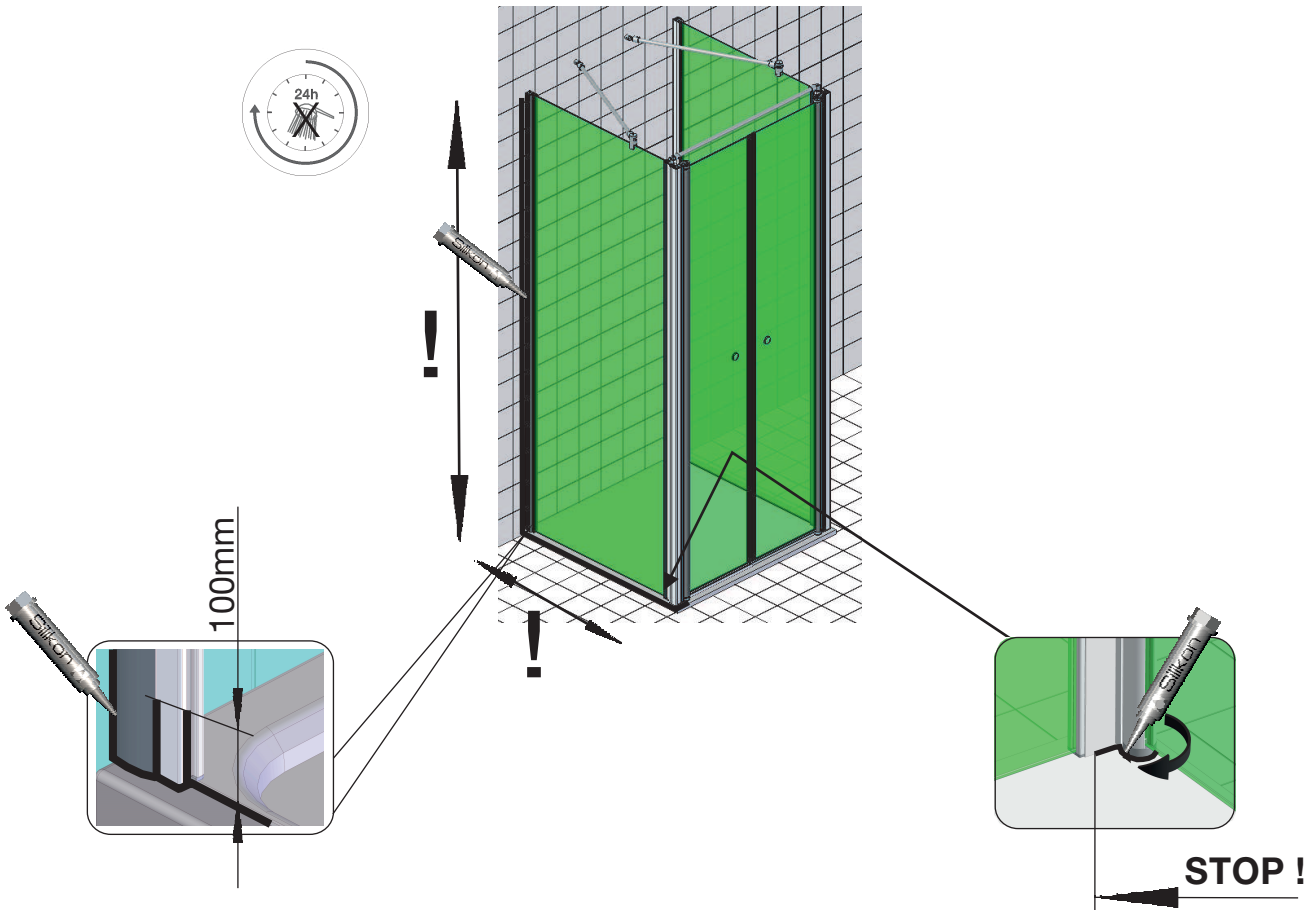


STOP !

Planplus U-Kabine mit Doppelpendeltür

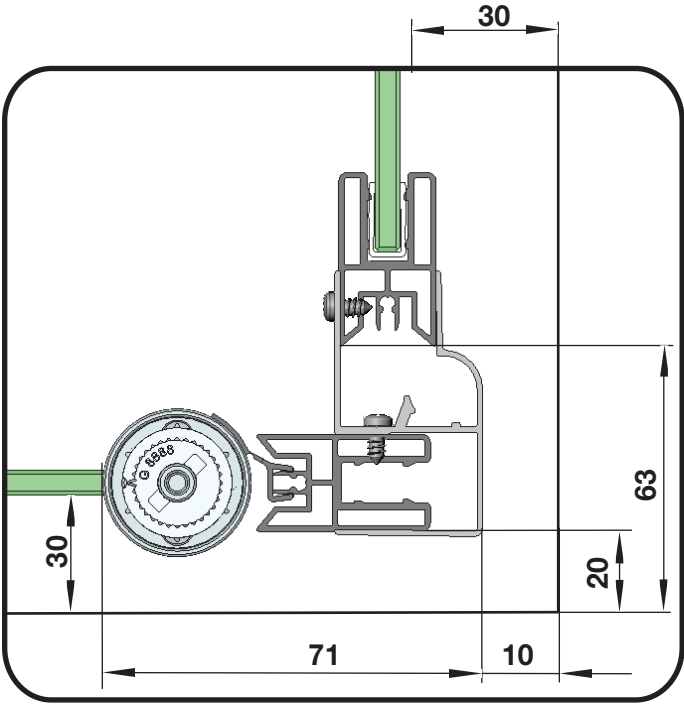

Montage auf Duschtasse

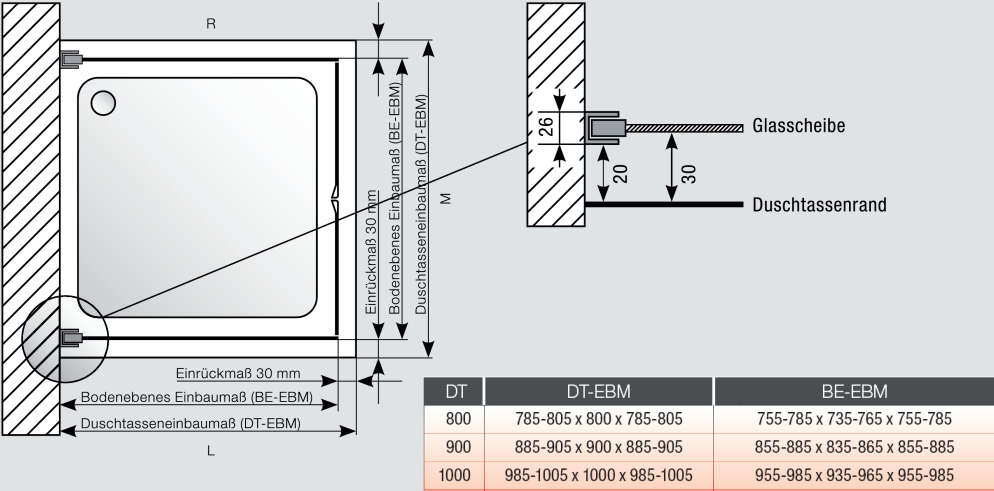

Montage Bodeneben

